

Model: GT-FTC/MF

Mini Flight Dish Washer
Parts Manual

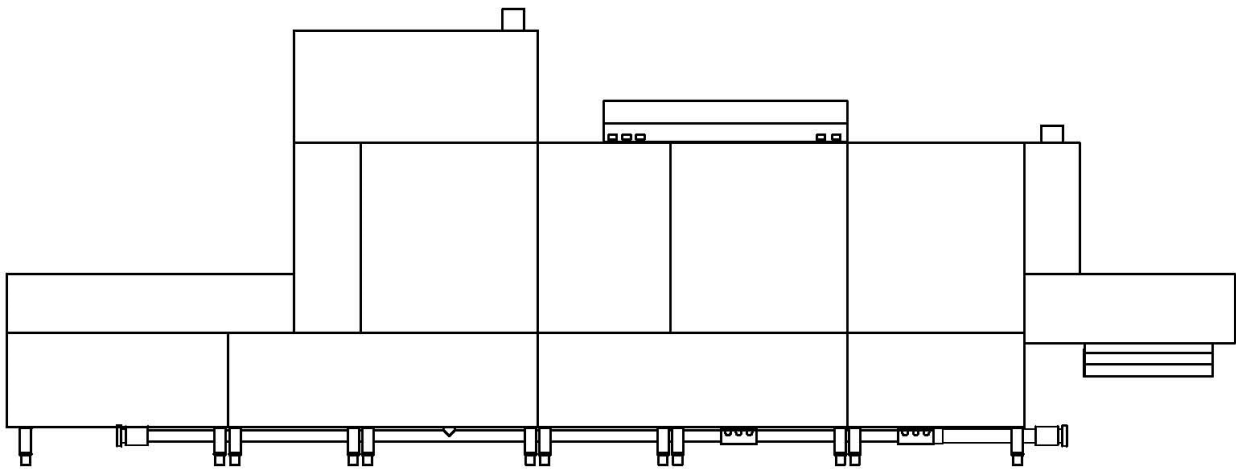


GLOBAL-TEK MACHINERY PTE. LTD.

Upper Hood.....	3
Loading Section (950 mm).....	5
Upper Hood (single wash)	7
Upper Hood (double wash)	9
Single wash tank component (old model)	11
Single wash tank component (new model)	13
Double Wash tank component (old model)	15
Double Wash tank component (new model)	17
Wash Tank Steam Heat Piping.....	19
Single Wash and Rinse Arm Assembly.....	21
Single Wash and Rinse Arm Assembly.....	21
Double Wash and Rinse Arm Assembly (R->L)	23
Double Wash and Rinse Arm Assembly (L->R)	25
Double Rinse Upper Hood	27
Double Rinse Section (old model)	29
Double Rinse Section (new model)	31
Single Rinse Section (old)	33
Single Rinse Section (new)	35
Double Rinse Section (old)	37
Double Rinse Section (new)	39
Electrical Heat Booster Heater	41
Steam HearBooster Heater.....	43
Booster Heater Pipping Assy	45
Drying Section Upper Hood component.....	47
480 mm Drying Section Upper Hood.....	49
480 mm Drying Section Lower Portion	51
1000 mm Unloading Section.....	53

GLOBAL-TEK MACHINERY PTE. LTD.

Unloading Magnetic Switch Section.....	55
Unloading Gear & Wheel Section	57
Conveyor Motor Section	59
Conveyor Peg Section	61
Electrical cabinet	63
Electrical control components for Single Tank, Single Rinse	65
Electrical control components for Single Tank, Single Rinse & Blower.....	67


Upper Hood

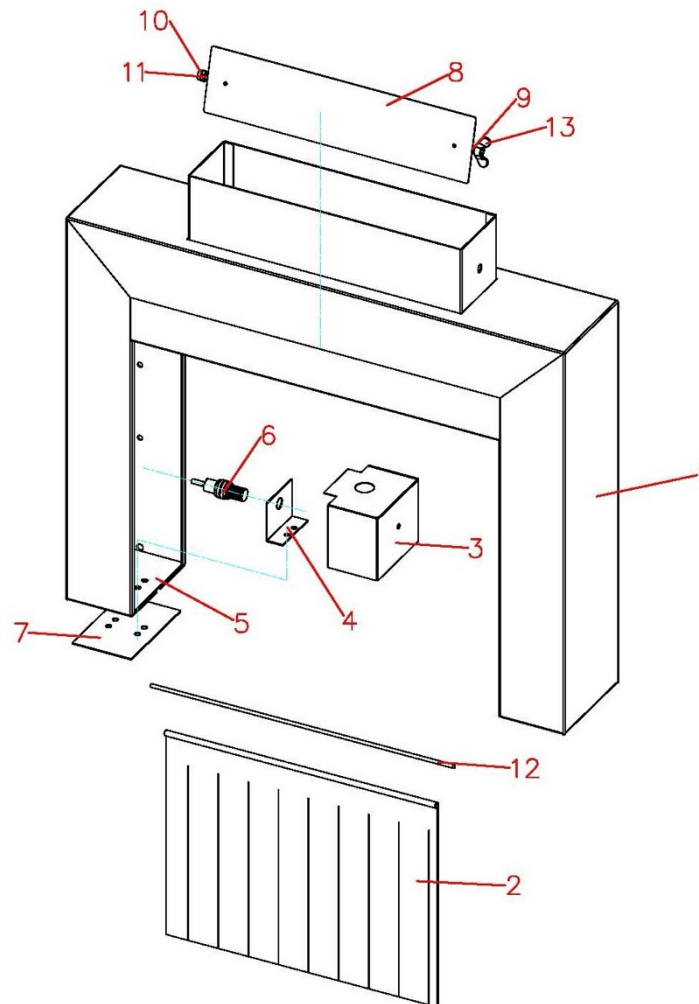

GLOBAL-TEK MACHINERY PTE. LTD.


Upper Hood			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-J11	Upper Hood	1
2	F031-MF-02	Curtain	1
3	0MF-J13-304	Infra-Red Sensor Housing	1
4	0MF-J13-303-1	Sensor Bracket	1
5	0MF-J11-302	Bracing Sheet	2
6	G034-S186E-01	S186E (transmit)	1
	G034-S18SP6R-01	S18SP6R (receiver)	1
7	0MF-J11-304	Bracing Sheet	2
8	0CD-J11-303-4	Exhaust Direction Blade	1
9	A012-J11/303/3-02	Exhaust Blade Shaft	1
10	A012-J11/303/5-01	Washer	1
11	E015-M8-01	Nut	1
12	C004-D6-01	Curtain Rod	1
13	E016-M10-01	The butterfly nut	1

Loading Section (950 mm)

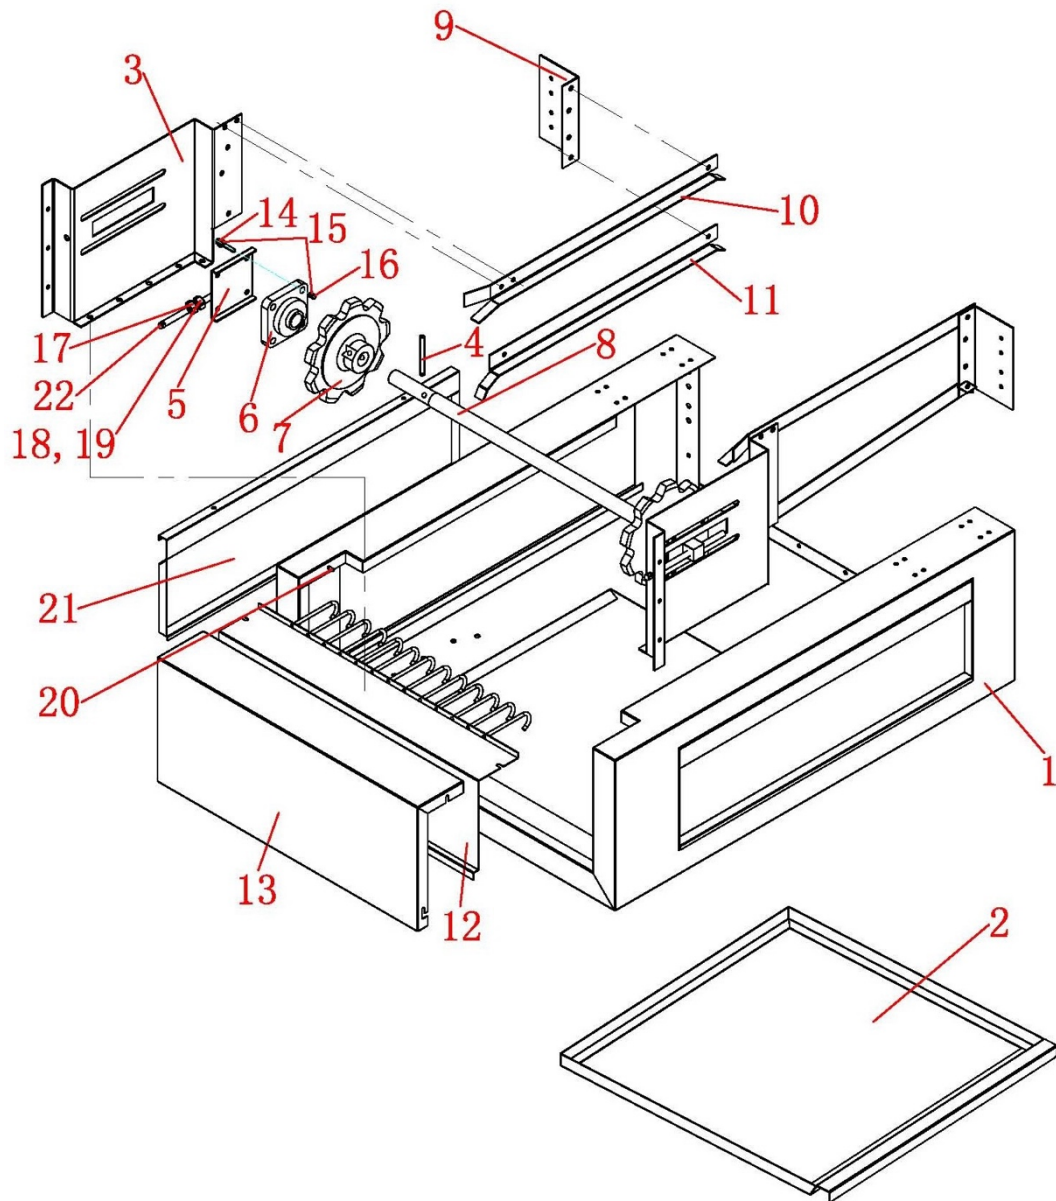


GLOBAL-TEK MACHINERY PTE. LTD.

Loading Section (950 mm)			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-J10A-301-L/R (left to right)	Loading Base	1
	0MF-J10A-301-R/L (right to left)	Loading Base	
2	0MF-J10A-305A	Scrap Tray	1
3	0CD-J15-301A	Side Bracket	2
4	A006-M8x70-01	Spring pin	2
5	0CD-J15-302A	Transition plate	2
6	A010-SUCF205-01	Stainless steel bearing	2
7	F027-30305-01	Conveyor Wheel (loading)	2
8	A012-30301A-02	Conveyor Wheel shaft (loading side)	1
9	0CD-J15-303A	Bracket	2
10	0MF-J15A-304A	Guide rail	2
11	0MF-J15A-305A	Guide rail	2
12	MF-J10A-306-2	Panel	1
13	MF-J10A-306-1	Panel	1
14	E009-M10x30-01	Hexagonal Nut	8
15	E012-M10-01	Flat Washer	8
16	E015-M10-01	Lock nut	8
17	E013-M10-01	Hexagonal Nut	2
18	E013-M10-02	Hexagonal copper nut	2
19	E012-M10-01	Flat Washer	2
20	A012-J13/301-01	Pile head	4
21	0CD-J10B-301-2	Side Panel	2
	E014-M10-01	Cap nut	2

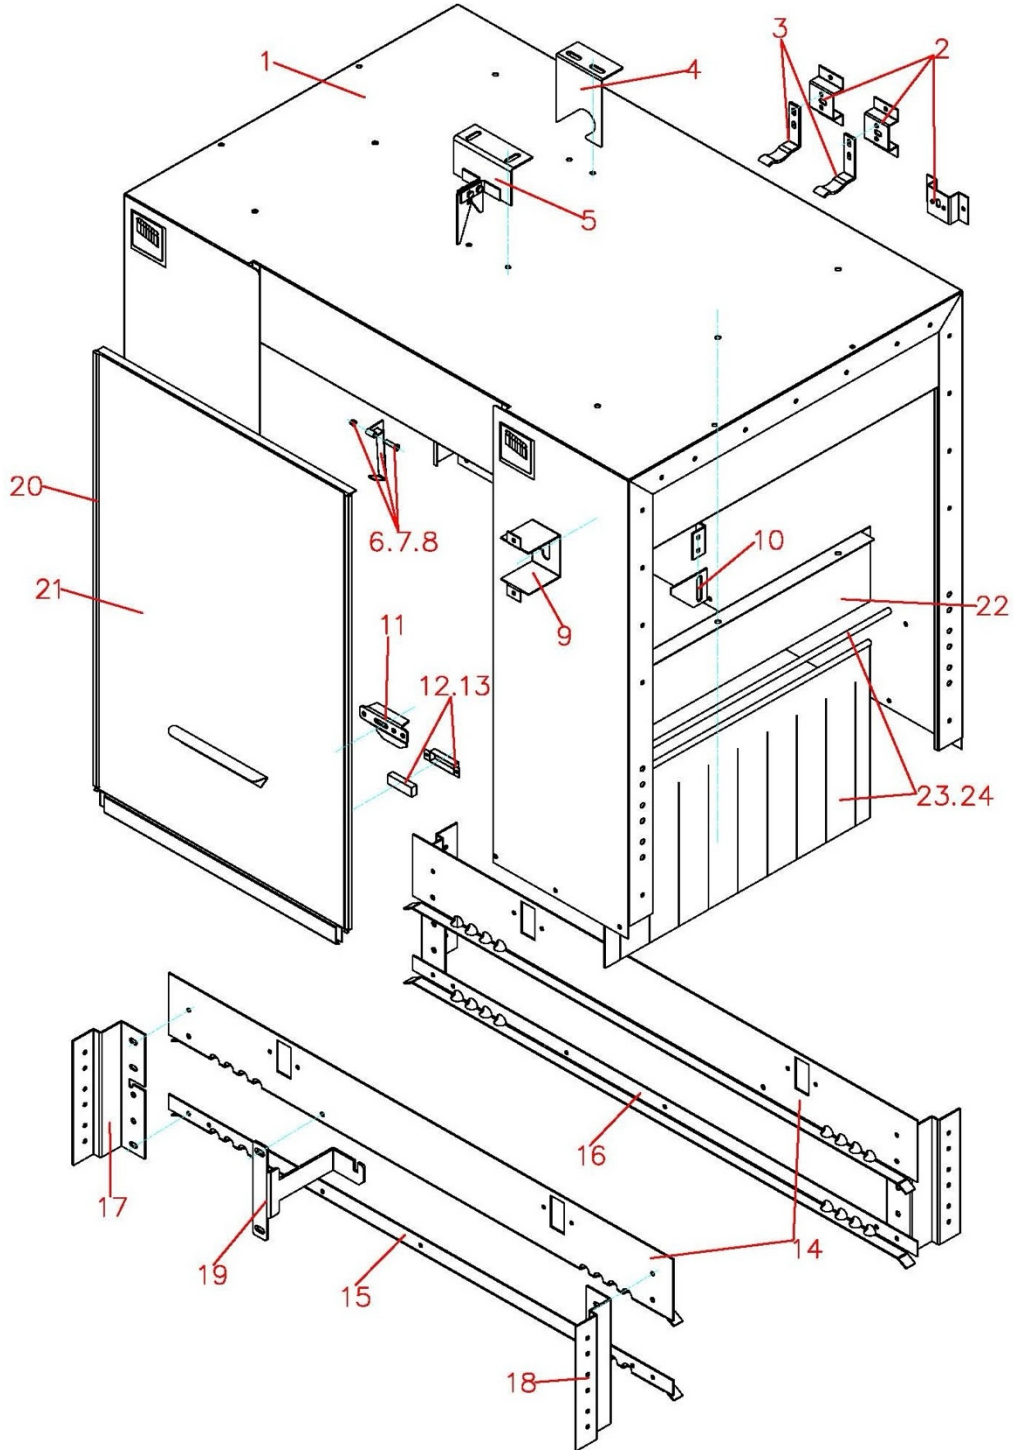

GLOBAL-TEK MACHINERY PTE. LTD.


Upper Hood (single Wash)			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-YQ21	Upper Hood	1
2	0CD-YQ27-305	Upper Wash Arm Bracket	3
3	0T2D-50322	Upper Wash Arm Holder	2
4	0T2D-50323	Upper Wash Hook	1
5	0T2D-50324	Upper Wash Hook locking Bracket	1
6	E010-M5x30-01	Hexagon Socket Screw	1
7	0CD-YQ23-331	Door Hook	1
8	E015-M5-01	Nut	1
9	0MF-PD31-302-3	Lower Wash Holder	1
10	0T2D-50325	Lower Wash Arm Bracket	1
11	0CD-YQ23-314	Drain Closer	1
12	A005-10x17x51-01	Door Magnet	1
13	0T2D-65318-8	Magnet Housing	1
14	0MF-YQ25-301	Guide Rail	2
15	0MF-YQ25-302L	Guide Rail	1
16	0MF-YQ25-302R	Guide Rail	1
17	0CD-YQ25-303L	Side Panel Bracket (left)	2
18	0CD-YQ25-303R	Side Panel Bracket (right)	2
19	0CD-YQ27-304	Bracket	1
20	F003-65326-01	Door Guide	2
21	0MF-YQ23-303	Sliding Door	1
22	0MF-PD33-303	Curtain Hook	1
23	C004-D6-01	Curtain Rod	2
24	F031-MF-01	Curtain	2

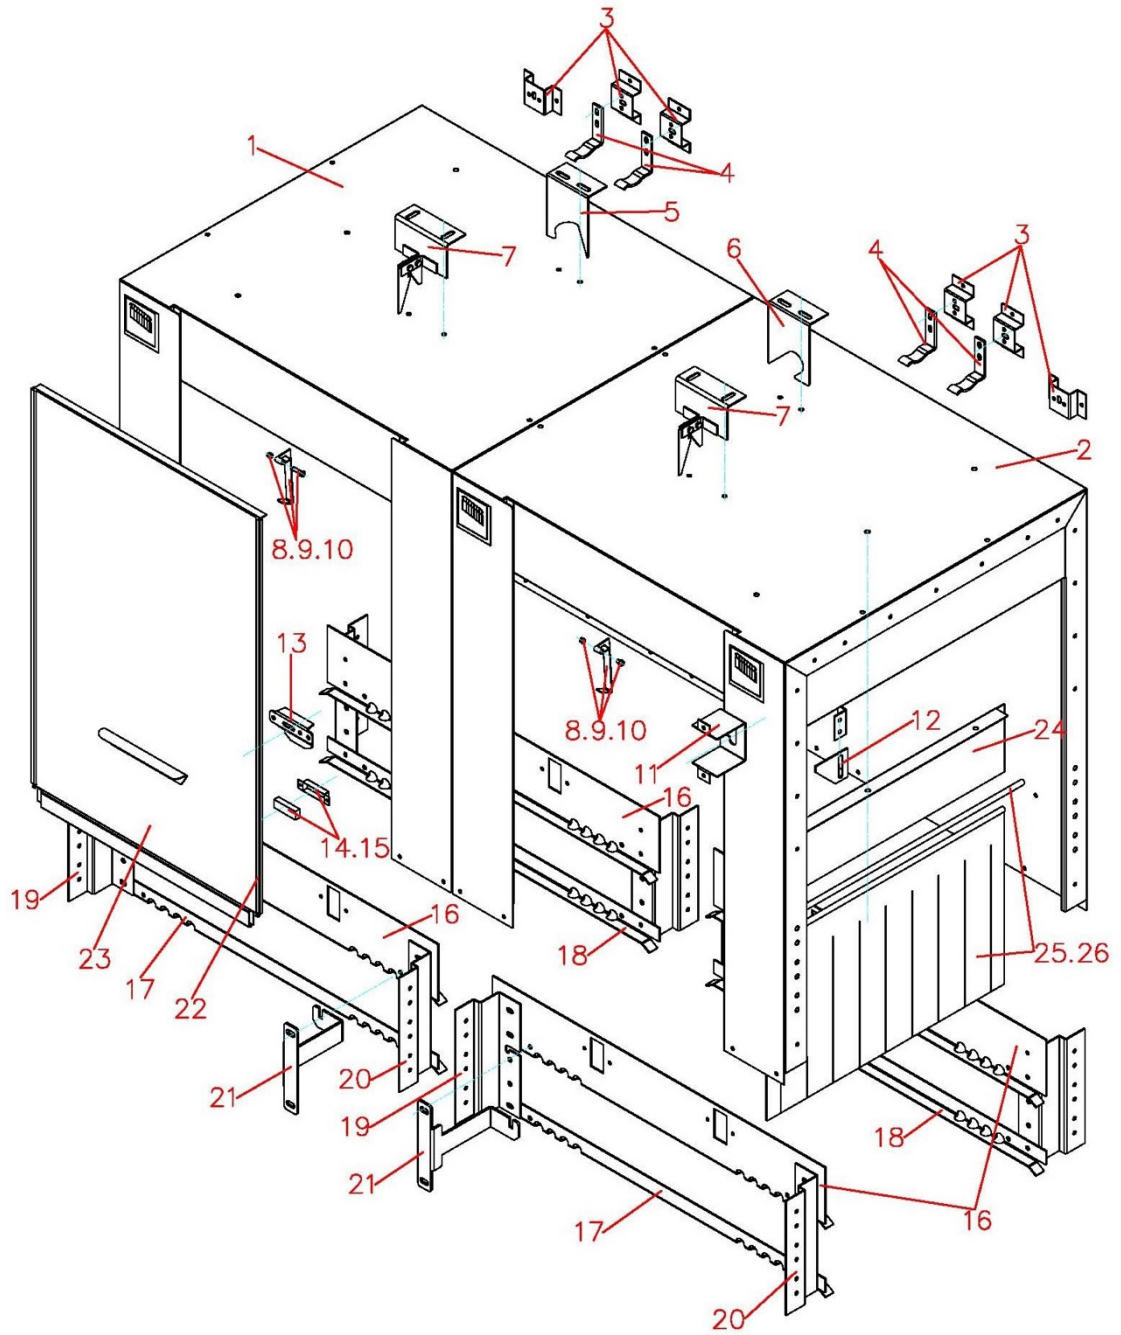

GLOBAL-TEK MACHINERY PTE. LTD.


Upper Hood (double wash)			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-YQ21AL	Upper Hood (left)	1
2	0MF-YQ21AR	Upper Hood (right)	1
3	0CD-YQ27-305	Upper Wash Arm Bracket	6
4	0T2D-50322	Upper Wash Arm Holder	4
5	0T12D-50323L-1	Upper Wash Arm Hook (left)	1
6	0T2D-50323	Upper Wash Arm Hook (right)	1
7	0T2D-50324	Upper Wash Arm locking Bracket	2
8	E010- M5x30-01	Hexagon Socket Screw	2
9	0CD-YQ23-331	Door Hook	2
10	E015-M5-01	Nut	2
11	0MF-PD31-302-3	Lower Wash Arm Holder	2
12	0T2D-50325	Lower Wash Arm Bracket	2
13	0CD-YQ23-314	Drain Closer	2
14	A005-10x17x51-01	Door Magnet	2
15	0T2D-65318-8	Magnet Housing	2
16	0MF-YQ25-301	Guide Rail	4
17	0MF-YQ25-302L	Guide Rail	2
18	0MF-YQ25-302R	Guide Rail	2
19	0CD-YQ25-303L	Side Panel Bracket (left)	4
20	0CD-YQ25-303R	Side Panel Bracket (right)	4
21	0CD-YQ27-304	Bracket	2
22	F003-65326-01	Door Guide	4
23	0MF-YQ23-303	Sliding Door	2
24	0MF-PD33-303	Splash Restrictor	1
25	C005-D6-01	Curtain Rod	3
26	F031-MF-01	Curtain	3

Single Wash Tank Component (old model)

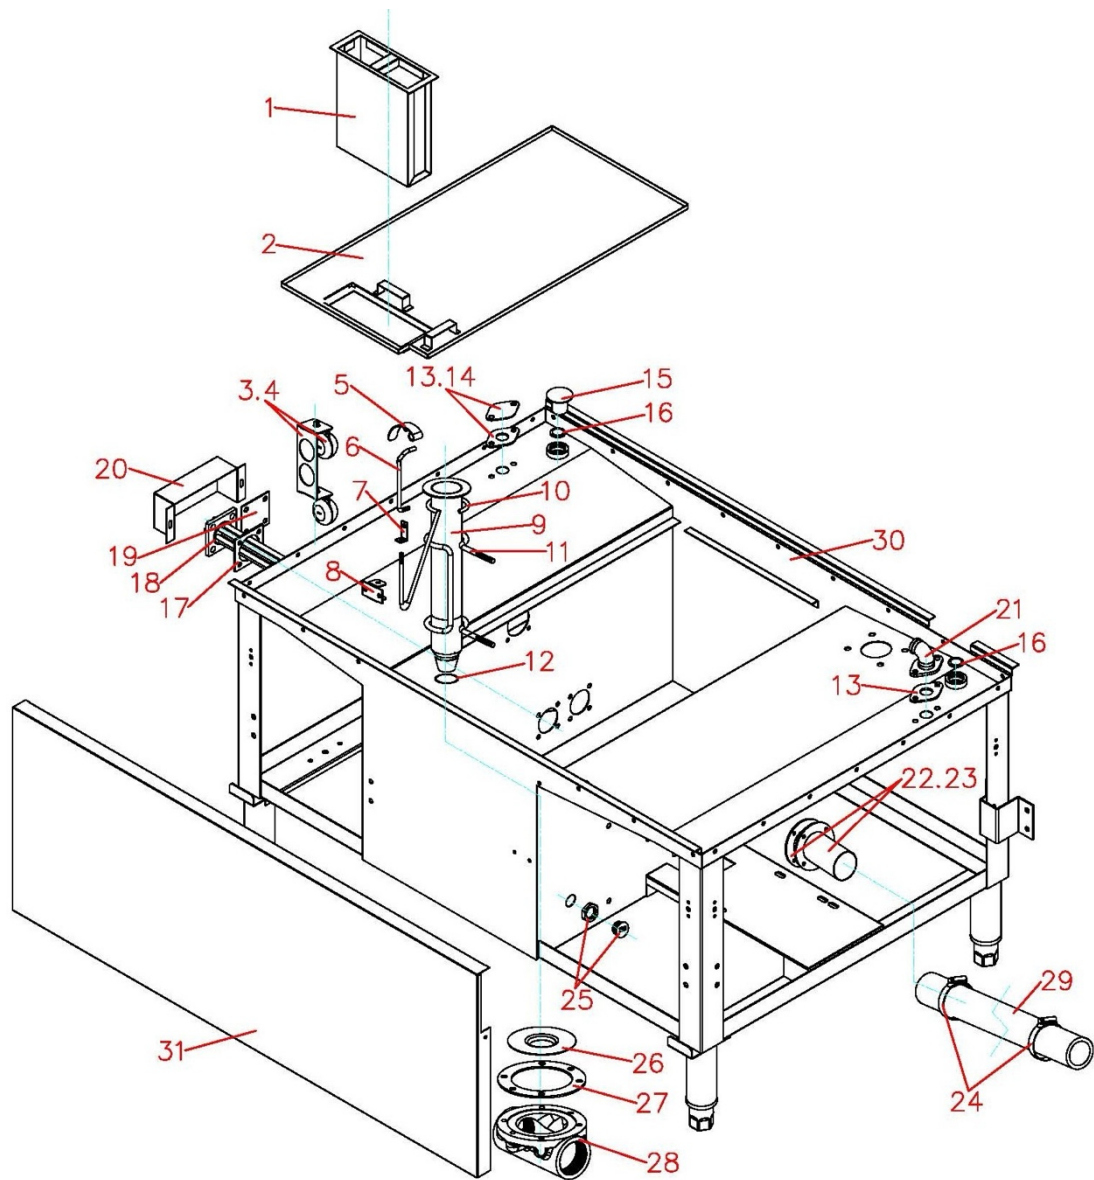

GLOBAL-TEK MACHINERY PTE. LTD.

Single Wash Tank Component (old model)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-YQ23-323	Basket	1
2	0MF-YQ23-322	Scrap Tray	1
3	0T2D-70309	Floating Ball	2
4	0CD-YQ23-318	Float Ball Bracket	2
5	0CD-YQ23-304	Drain handle	1
6	0CD-YQ23-317-3	Drain Pipe Guider	1
7	0CD-YQ23-317-2	Drain Link	1
8	0CD-YQ23-317-1	Drain Guide holder	1
9	0CD-YQ23-336	Drain /Overflow Pipe	1
10	0CD-YQ23-317-4	Lift Link	1
11	0CD-YQ23-306	Drain Pipe Guider	1
12	F002-34.5x5.3-01	Drain Pipe O Ring	1
13	F001-50317-01	Gasket	2
14	0T2D-65323	Hold plug	1
15	0MF-YQ20-314	choke plug	1
16	F002-25x2.65-01	O Ring	2
17	F001-40309-01	Gasket	2
18	G005-9KW-02	Wash Tank Heating Element	1
19	0T2D-40305	Heater Hold Plug	1
20	0CD-YQ23-310A	Heater Cover	1
21	0MF-YQ20-316	Fill Elbow	1
22	F001-60307A-01	Gasket	1
23	0CD-YQ27-309	By-pass Hose	2
24	E018-46x70-01	Hose Clamp	2
25	F005-M22-01	Hole Plug	2
26	0T2D-65308-2	Washer	1
27	F001-65309-01	Gasket	1
28	A012-65308/1/B-01	Drain Stand	1
29	F021-YQ27/310A-01	Rubber hose	1
30	0MF-YQ20	Wash Tank	1
31	0MF-YQ23-325-1	Front Panel	2

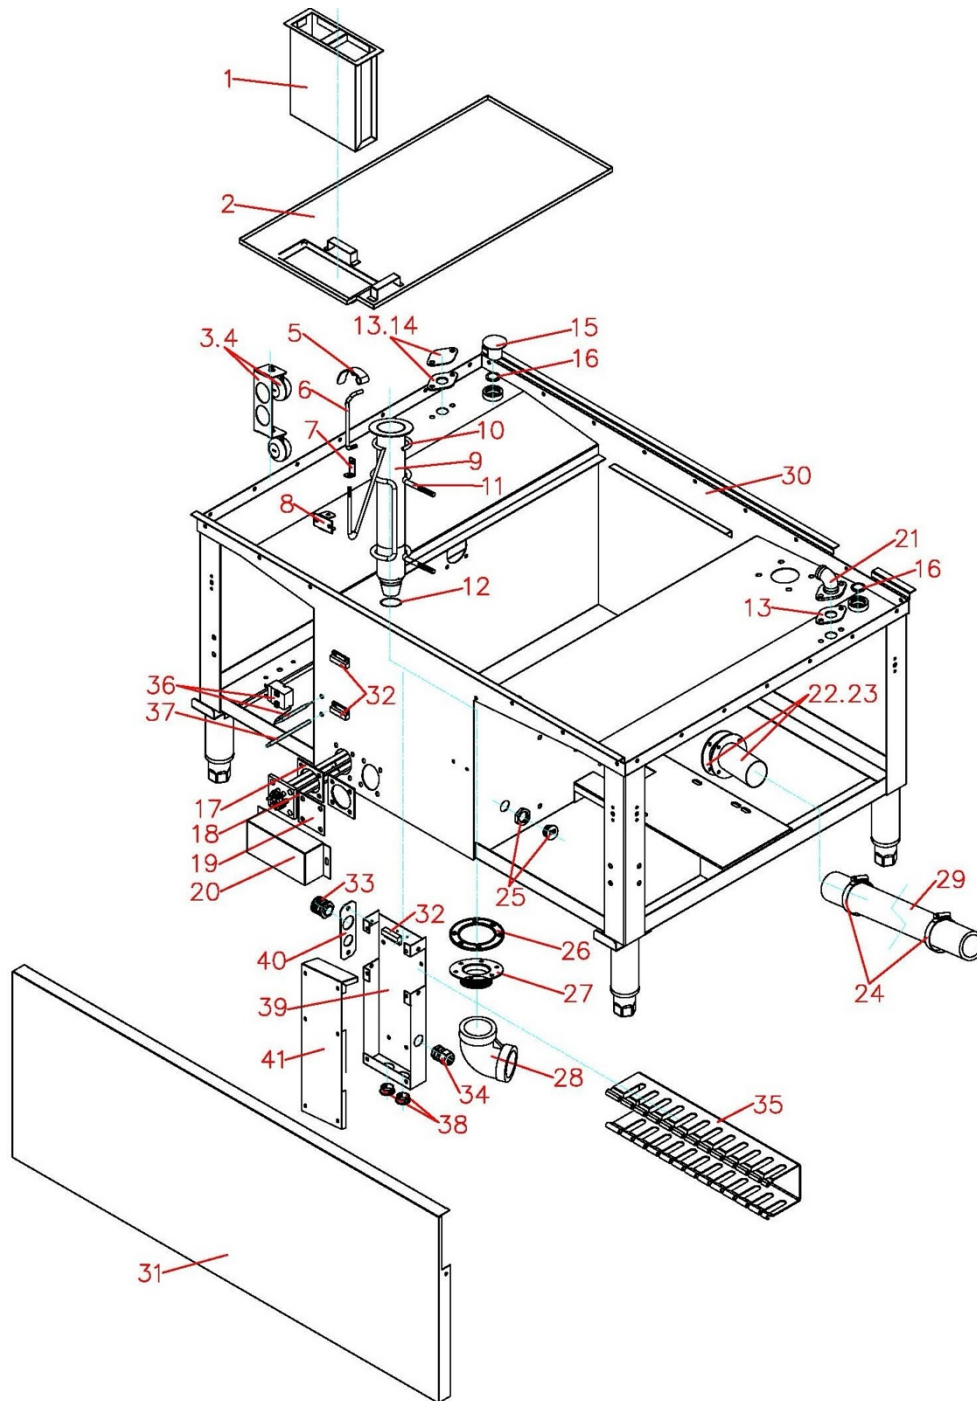

GLOBAL-TEK MACHINERY PTE. LTD.

Single Wash Tank Component (new model)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-YQ23-323	Basket	1
2	0MF-YQ23-322	Scrap Tray	1
3	0T2D-70309	Floating Ball	2
4	0CD-YQ23-318	Float Ball Bracket	2
5	0CD-YQ23-304	Drain Handle	1
6	0CD-YQ23-317-3	Drain Pipe Guider	1
7	0CD-YQ23-317-2	Drain Link	1
8	0CD-YQ23-317-1	Drain Guide holder	1
9	0CD-YQ23-336	Drain / Overflow Pipe	1
10	0CD-YQ23-317-4	Drain Lift Link	1
11	0CD-YQ23-306	Drain Pipe Guider	1
12	F002-34.5x5.3-01	Drain O Ring	1
13	F001-50317-01	Gasket	1
14	0T2D-65323	Hold Plug	1
15	0MF-YQ20-314	choke plug	1
16	F002-25x2.65-01	O Ring	2
17	F001-40309-01	Gasket	2
18	G005-9KW-02	Wash Tank Heating Element	1
19	0T2D-40305	Heater Hold Plug	1
20	0CD-YQ23-310A	Heater Cover	1
21	0MF-YQ20-316	Fill Elbow	1
22	F001-60307A-01	Gasket	1
23	0CD-YQ27-309	By-pass Hose	2
24	E018-46x70-01	Hose Clamp	2
25	F005-M22-01	Hole Plug	2
26	F001-65309A-01	Gasket	1
27	0T2D-65308A	Drain Seat	1
28	D009-2-01	Drain Elbow	1
29	F021-YQ27/310A-01	Rubber hose	1
30	0MF-YQ20	Wash Tank	1
31	0MF-YQ23-325-1	Front Panel	2
32	0JD-65998A	Wash Tank Level Magnet	3
33	G030-PG16-01	Conduit	1
34	G029-PG11-01	Conduit Head	1
35	G044-XC-02	Wire Trunk (50 cm)	1
36	G021-82C-01	Thermostat 82C	1


GLOBAL-TEK MACHINERY PTE. LTD.

37	G065-WZJ/4010/2-01	Temperature probe	1
38	G050-D26-01	Bushing	2
39	0CD-YQ14-301	Terminal block	1
40	0CD-YQ24-303	Junction Box	1
41	0CD-YQ24-302	Junction Box Cover	1

GLOBAL-TEK MACHINERY PTE. LTD.

Double Wash Tank Component (old model)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-YQ23-323	Basket	2
2	0MF-YQ23-322 0MF-YQ23-322L	Scrap Tray (left or right)	2
3	0T2D-70309	Floating Ball	4
4	0CD-YQ23-318	Float Ball Bracket	4
5	0CD-YQ23-304	Drain Handle	2
6	0CD-YQ23-317-3	Drain Pipe Guider	2
7	0CD-YQ23-317-2	Drain Link	2
8	0CD-YQ23-317-1	Drain Guide holder	2
9	0CD-YQ23-336	Drain / Overflow Pipe	1
9-1	0CD-YQ23-336A	Drain Pipe	1
10	0CD-YQ23-317-4	Drain Lift Link	2
11	0CD-YQ23-306	Drain Pipe Guider	2
12	F002-34.5x5.3-01	Drain O Ring	2
13	F001-50317-01	Gasket	2
14	0T2D-65323	Hold Plug	1
15	0MF-YQ20-314	choke plug	1
16	F002-25x2.65-01	O Ring	2
17	F001-40309-01	Gasket	4
18	G005-9KW-02	Wash Tank Heating Element	2
19	0T2D-40305	Heater Hold Plug	2
20	MF-YQ23-310	Heater Cover	2
21	0MF-YQ20-316	Fill Elbow	1
22	F001-60307A-01	Gasket	1
23	0CD-YQ27-309	By-pass Hose	2
24	E018-46x70-01	Hose Clamp	2
25	F005-M22-01	Hole Plug	2
26	0T2D-65308-2	Washer	2
27	F001-65309-01	Gasket	2
28	A012-65308/1/B-01	Drain Stand	2
29	F021-YQ27/310A-01	Rubber hose	1
30	0MF-YQ20	Double Wash Tank	1
31	0MF-YQ23-325-1	Front Panel	2


Double Wash Tank Component (new model)

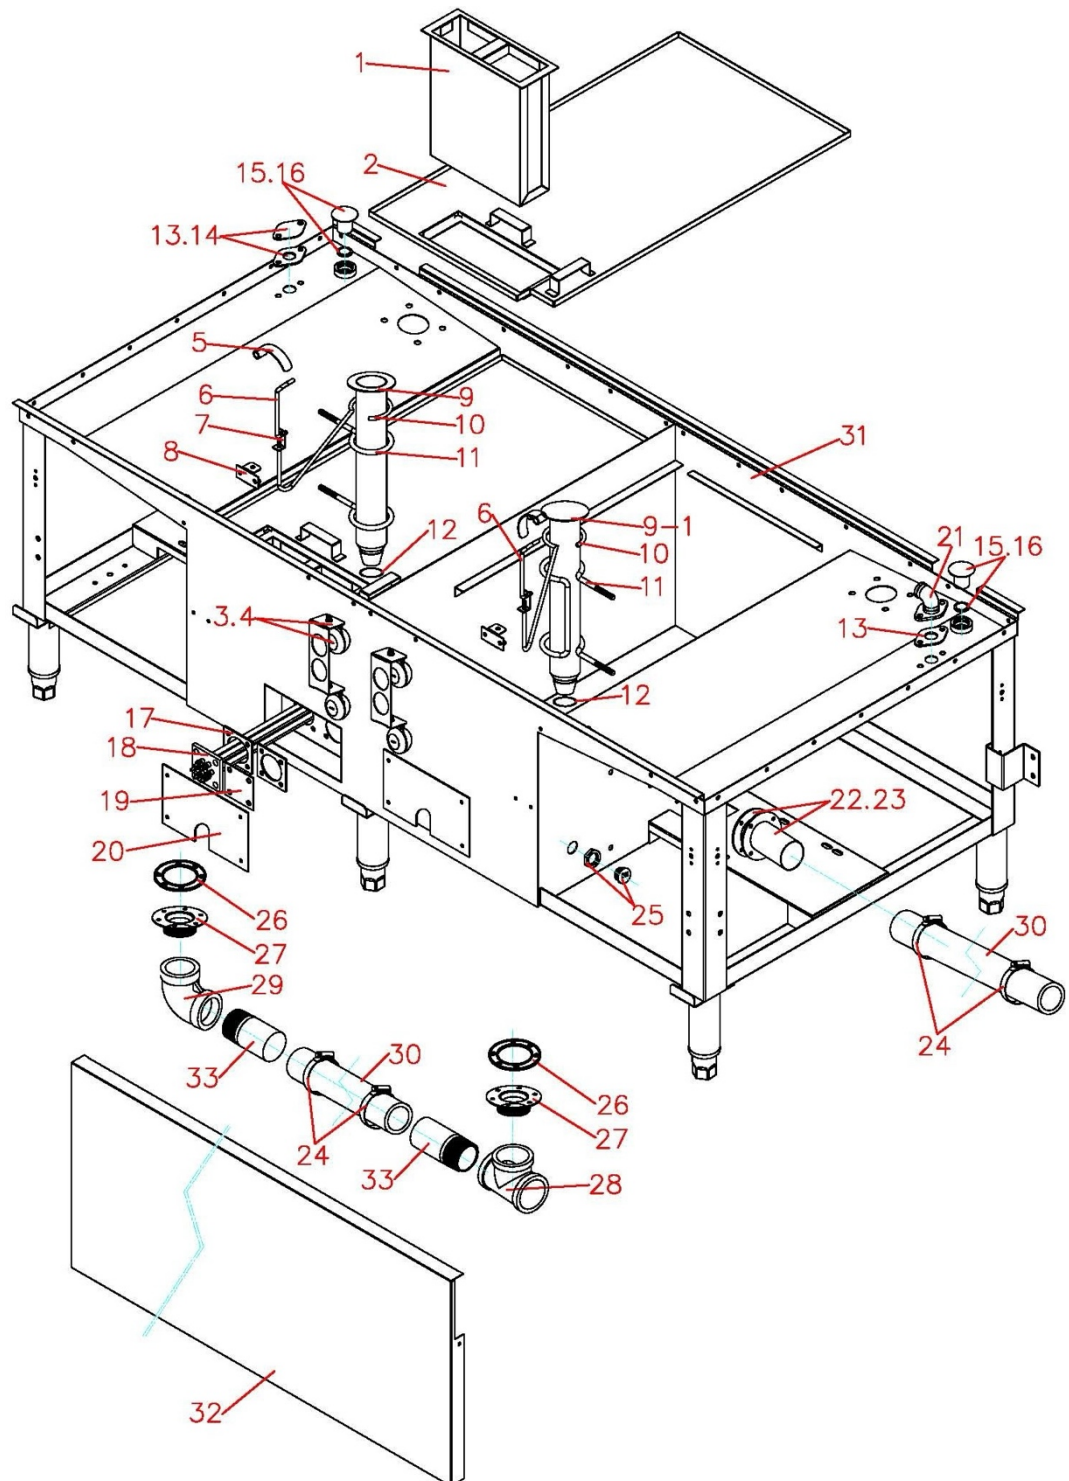

GLOBAL-TEK MACHINERY PTE. LTD.

Double Wash Tank Component (new model)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-YQ23-323	Basket	2
2	0MF-YQ23-322 0MF-YQ23-322L	Scrap Tray	2
3	0T2D-70309	Floating Ball	4
4	0CD-YQ23-318	Float Ball Bracket	4
5	0CD-YQ23-304	Drain handle	2
6	0CD-YQ23-317-3	Drain Pipe Guider	2
7	0CD-YQ23-317-2	Drain Link	2
8	0CD-YQ23-317-1	Drain Guide holder	2
9	0CD-YQ23-336	Drain Pipe	1
9-1	0CD-YQ23-336A	Drain Pipe	1
10	0CD-YQ23-317-4	Drain Lift Link	2
11	0CD-YQ23-306	Drain Pipe Guider	2
12	F002-34.5x5.3-01	Drain O Ring	2
13	F001-50317-01	Gasket	2
14	0T2D-65323	Hold Plug	1
15	0MF-YQ20-314	choke plug	1
16	F002-25x2.65-01	O Ring	2
17	F001-40309-01	Gasket	4
18	G005-9KW-02	Wash Tank Heating Element	2
19	0T2D-40305	Heater Hold Plug	2
20	MF-YQ23-310	Heater Cover	2
21	0MF-YQ20-316	Fill Elbow	1
22	F001-60307A-01	Gasket	1
23	0CD-YQ27-309	By-pass Hose	2
24	E018-46x70-01	Hose Clamp	4
25	F005-M22-01	Hole Plug	2
26	F001-65309A-01	Gasket	2
27	0T2D-65308A	Drain Stand	2
28	D006-2-01	Drain Tee	1
29	D009-2-01	Drain Elbow	2
30	F021-YQ27/310A-01	Drain Rubber hose	2
31	0MF-YQ20	Double Wash Tank	1
32	0MF-YQ23-325-1	Front Panel	2
33	0CD-D50	Single head silk	2


Wash Tank Steam Heat Piping (direct injection)

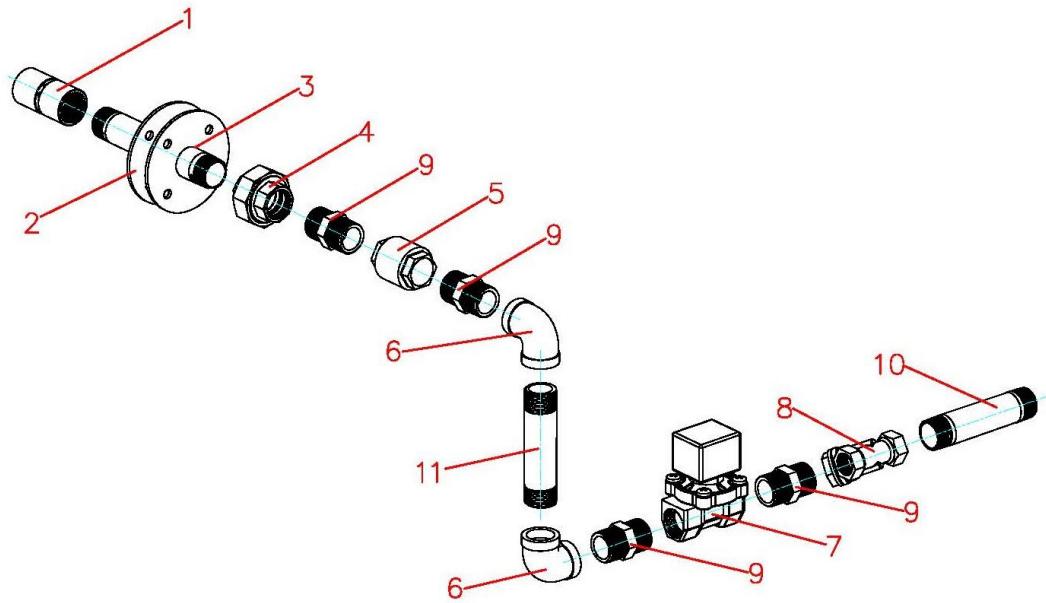

GLOBAL-TEK MACHINERY PTE. LTD.

Wash Tank Steam Heat Piping (direct injection)			
Item No.	Parts Series No.	Parts Name	Qty
1	A012-65312/2-01	Silencer	1
2	0T12Z-65312-3	Gasket	1
3	0T12Z-65312	Steam Connection	1
4	D014-3/4-01 D014-3/4-02 D014-3/4-03 D014-3/4-04	Coupling Joint	1
5	D020-3/4-01	Check Valve	1
6	D009-3/4-01	3/4" S.S. Elbow	2
7	G017-AC110V-01	Steam Solenoid Valve	1
8	D016-3/4-01	Strainer	1
9	D004-3/4-01	3/4" S.S. Joint	4
10	D004-3/4x60-01	3/4" S.S. Joint	1
11	D004-3/4x75-01	3/4" S.S. Joint	1

Single Wash Arm Assembly

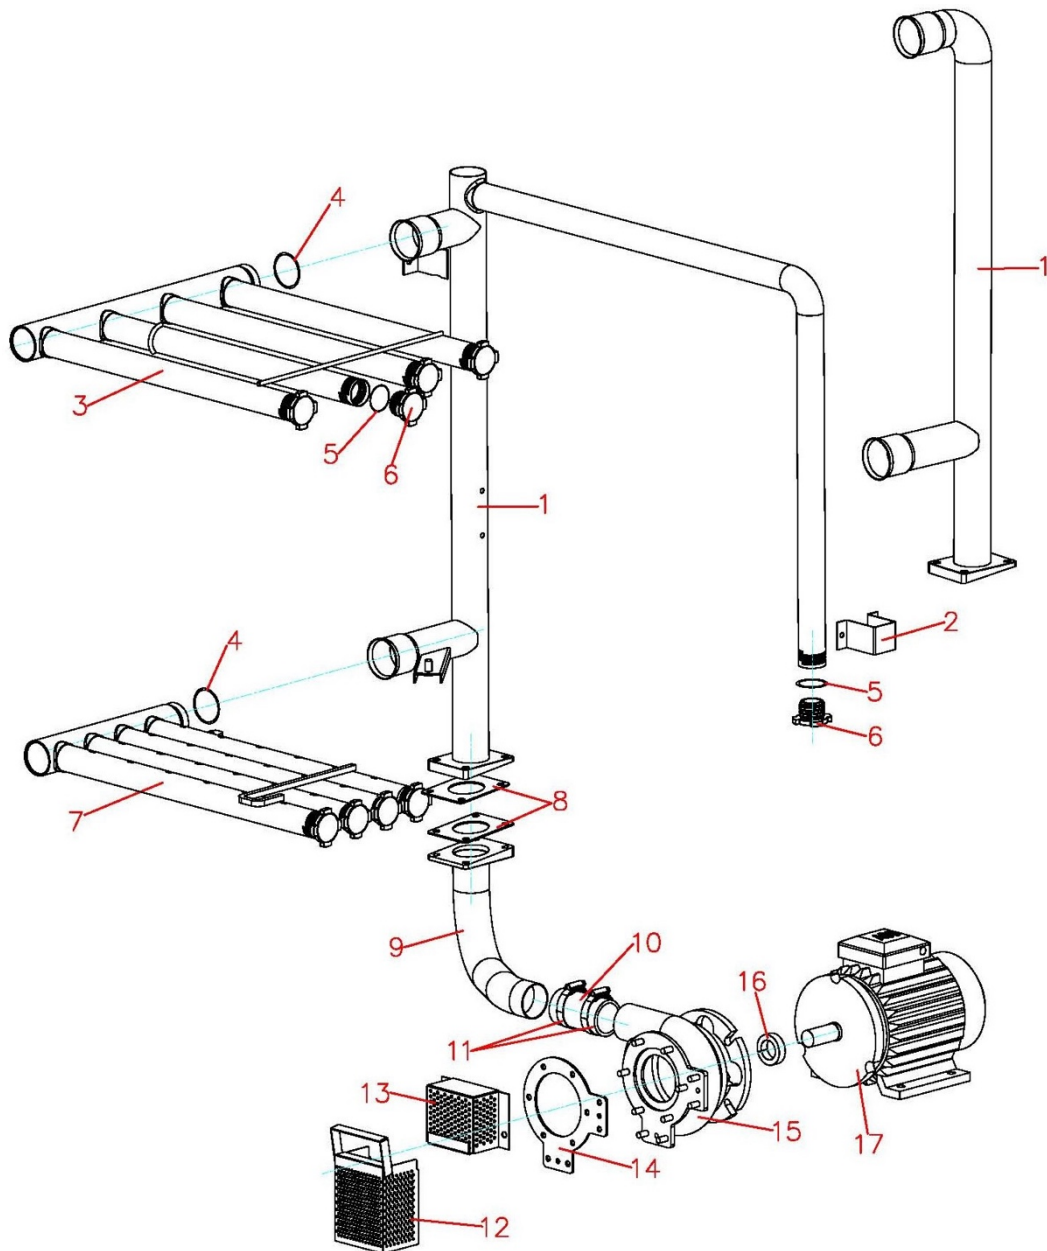


GLOBAL-TEK MACHINERY PTE. LTD.

Single Wash Arm Assembly				
Item No.	Parts Series No.	Parts Name	Parts Name	Qty
1	<u>0CD-YQ27-301A</u> 0CD-YQ27-301	<u>Stand Pipe with Side Spray</u> Stand Pipe w/o Side Spray		1
2	0CD-YQ25-304		Mounting Bracket for Side Spray	1
3	0T2D-50303		Upper Wash Arm only	1
4	F002-40x5.3-01		Wash Arm O Ring	2
5	F002-28x2.65-01		End-Cap O Ring	9
6	F007-50339-01		Wash Arm End-Cap	9
7	0MF-YQ27-302		Lower Wash Arm only	1
8	F001-50305-01		Gasket	2
9	0MF-YQ27-307		Wash Pump Elbow	1
10	F021-D51-01		Rubber Hose	1
11	E018-46X70-01		Hose Clamp	2
12	0T2D-65304		Pump Intake Screen	1
13	0T2D-60320		Pump Intake Screen Holder	1
14	0T2D-60319		Wash Pump Gasket	1
15	A012-60316-01		Wash Pump (complete)	1
16	A012-60317-01		Coupling	1
17	G002-2.2KW-01	ABB-90S-50HZ-2.2KW	ABB Wash Motor	1
	G002-1.5KW-02	ABB-90S-50HZ-1.5KW		
	G002-1.5KW-01	ABB-90S-60HZ-1.5KW		
	G002-2.2KW-02	ABB-90S-60HZ-2.2KW		

GLOBAL-TEK MACHINERY PTE. LTD.


Wash Arm w/ 4 Side Sprays Assembly (Left to Right)

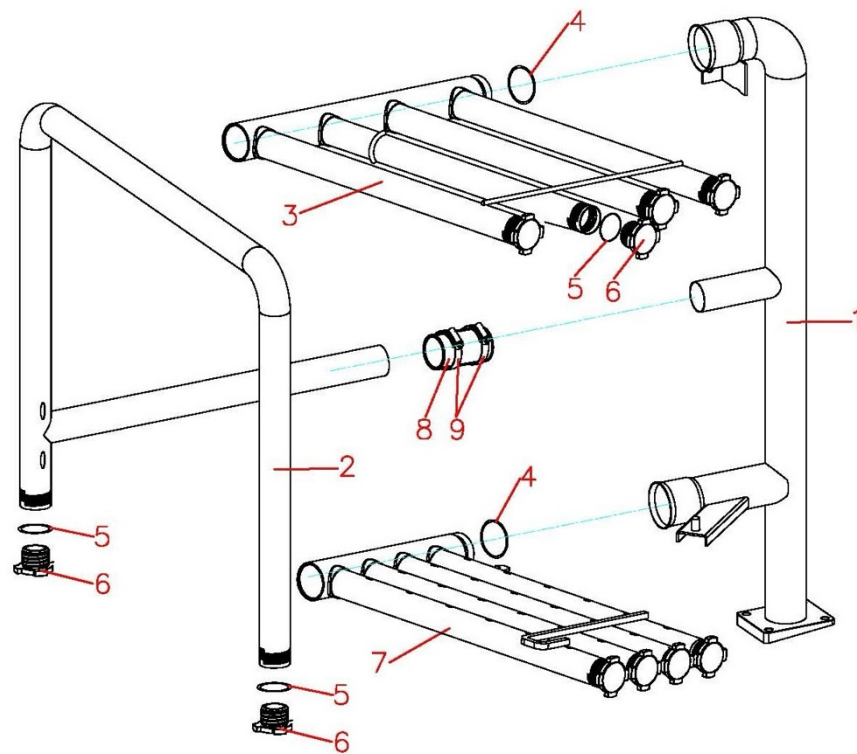

GLOBAL-TEK MACHINERY PTE. LTD.


Wash Arm Assembly (Left to Right)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-YQ27-301	Stand Pipe	1
2	0CD-YQ27-301-2AL	Side Spray (left)	1
3	0T2D-50303	Upper Wash Arm only	1
4	F002-40x5.3-01	Wash Arm O Ring	2
5	F002-28x2.65-01	End-Cap O Ring	10
6	F007-50339-01	Wash Arm End-Cap	10
7	0MF-YQ27-302	Lower Wash Arm only	1
8	F021-D38-01	Rubber Hose	1
9	E018-32X57-01	Hose Clamp	2

Double Tank Wash Arm Assembly (left tank)

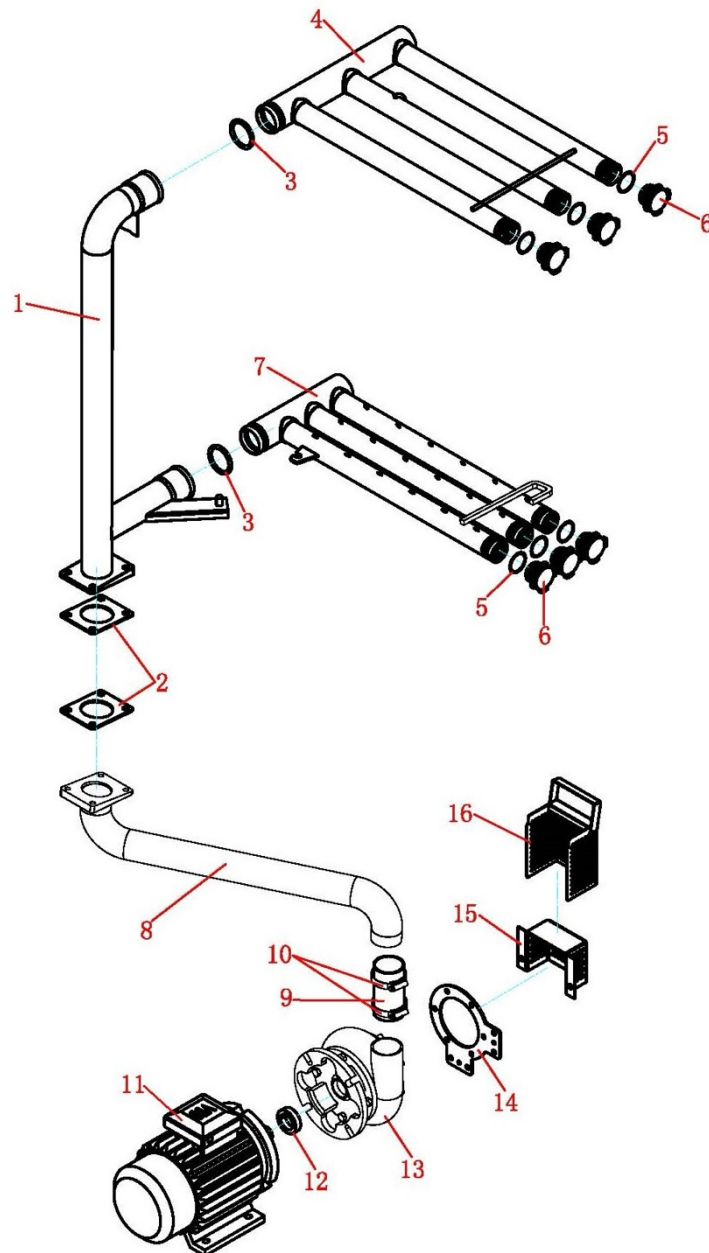


GLOBAL-TEK MACHINERY PTE. LTD.

Double Tank Wash Arm Assembly (left tank)			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-YQ27-301L 0MF-YQ27-301AL	Stand Pipe Stand Pipe with Side Spray	1
2	0T2D-50303	Gasket	2
3	F002-40x5.3-01	Wash Arm O Ring	2
4	0T12D-50303L	Upper Wash Arm only	1
5	F002-28x2.65-01	End-Cap O Ring	6
6	F007-50339-01	End-Cap	6
7	0MF-YQ27-302AL	Lower Wash Arm only	1
8	0MF-YQ27-307L	Wash Pump Elbow	1
9	F021-D51-01	Rubber Hose	1
10	E018-46X70-01	Hose Clamp	2
11	G002-2.2KW-01 G002-1.5KW-02 G002-1.5KW-01 G002-2.2KW-02	ABB-90S-50HZ-2.2KW ABB-90S-50HZ-1.5KW ABB-90S-60HZ-1.5KW ABB-90S-60HZ-2.2KW	ABB Wash Motor
12	A012-60317-01	Coupling	1
13	A012-60316-01	Wash Pump (complete)	1
14	F001-60319-01	Wash Pump Gasket	1
15	0T12D-60320	Pump Intake Screen	1
16	0T12D-60304	Pump Intake Screen Holder	1

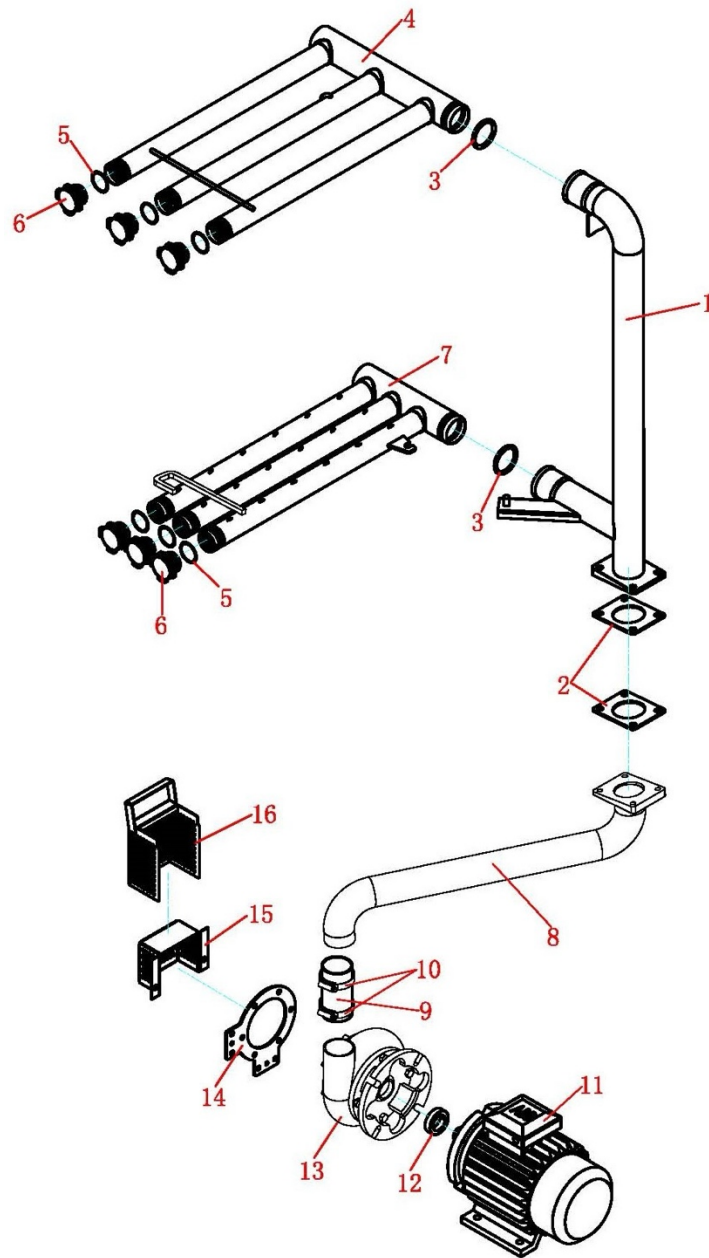

GLOBAL-TEK MACHINERY PTE. LTD.


Double Tank Wash Arm Assembly (right tank)				
Item No.	Parts Series No.	Parts Name	Parts Name	Qty
1	<u>0CD-YQ27-301A</u> 0CD-YQ27-301	Stand Pipe with Side Spray Stand Pipe		1
2	0T2D-50303		Gasket	2
3	F002-40x5.3-01		Wash Arm O Ring	2
4	0T12D-50303R		Upper Wash Arm Only	1
5	F002-28x2.65-01		End-Cap O Ring	6
6	F007-50339-01		Wash Arm End-Cap	6
7	0MF-YQ27-302AR		Lower Wash Arm only	1
8	0MF-YQ27-307L		Wash Pump Elbow	1
9	F027-D50.8-01		Rubber Hose	1
10	E018-46X70-01		Hose Clamp	2
11	G002-1.5KW-01 <u>G002-2.2KW-02</u> G002-1.5KW-01 G002-2.2KW-01	ABB-90S-50HZ-2.2KW ABB-90S-50HZ-1.5KW ABB-90S-60HZ-1.5KW ABB-90S-60HZ-2.2KW	ABB Wash Motor	1
12	A012-60317-01		Coupling	1
13	A012-60316/1-01		Wash Pump	1
14	F001-60319-01		Wash Pump Gasket	1
15	0T12D-60320		Pump Intake Screen	1
16	0T12D-60304		Pump Intake Screen Holder	1

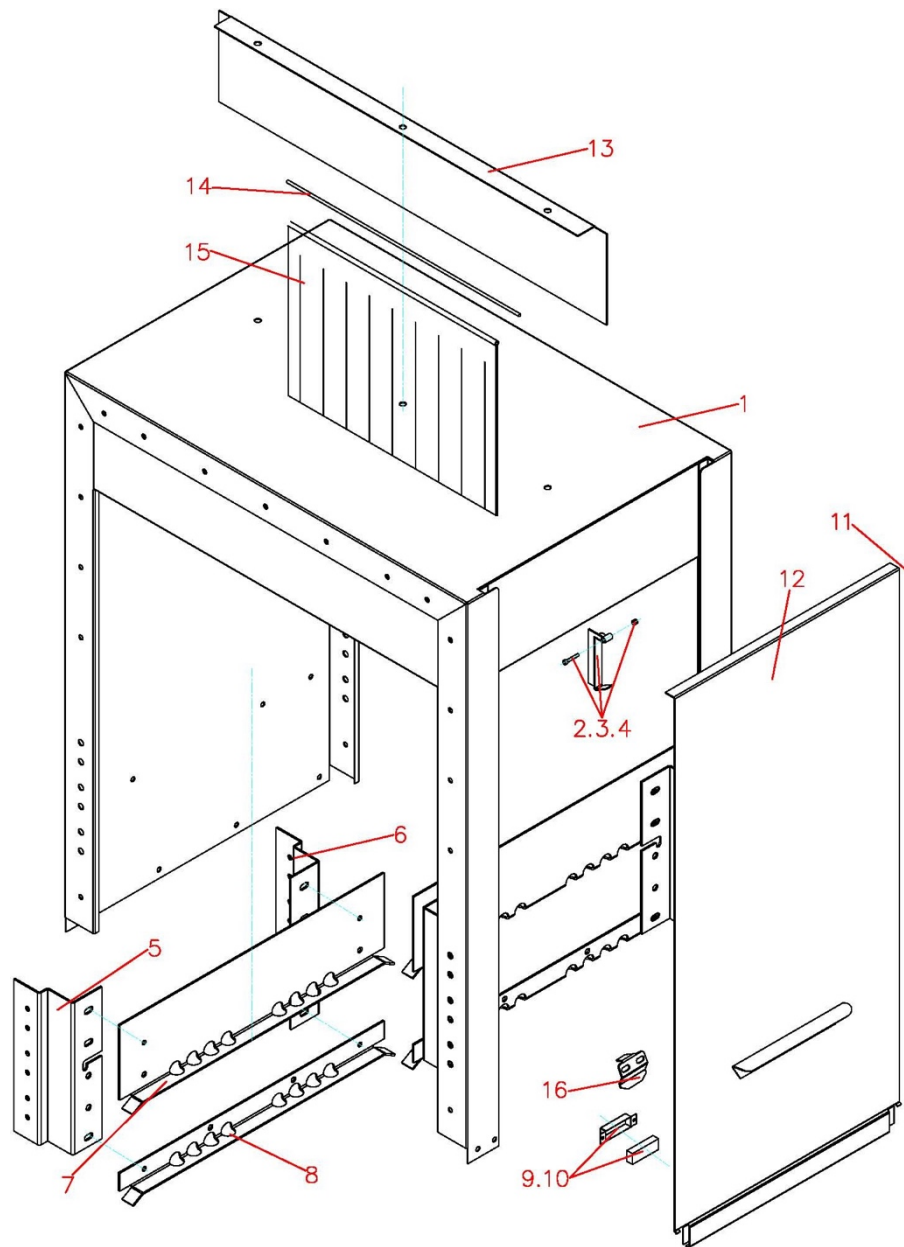

GLOBAL-TEK MACHINERY PTE. LTD.

Double Rinse Upper Hood			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-PD31	Upper Hood	1
2	E010-M5x30-01	Hexagon Socket Screw	1
3	0CD-YQ23-331	Door Hook	1
4	E015- M5-01	Nut	1
5	0CD-YQ25-303L	Bracket (left)	2
6	0CD-YQ25-303R	Bracket (right)	2
7	0MF-PD35-301	Guide Rail	2
8	0MF-PD35-302	Guide Rail	2
9	A005-10x17x51-01	Magnet	1
10	0T2D-65318-8	Magnet Housing	1
11	F003-65326-01	Door Guide	2
12	0MF-PD33-302	Door	1
13	0MF-PD33-303	Curtain Holder	1
14	C004-D6-01	Curtain Rod	2
15	F031-MF-01	Curtain	2
16	0T12D-65333	Drain Closer	1


Double Rinse Tank (old model)

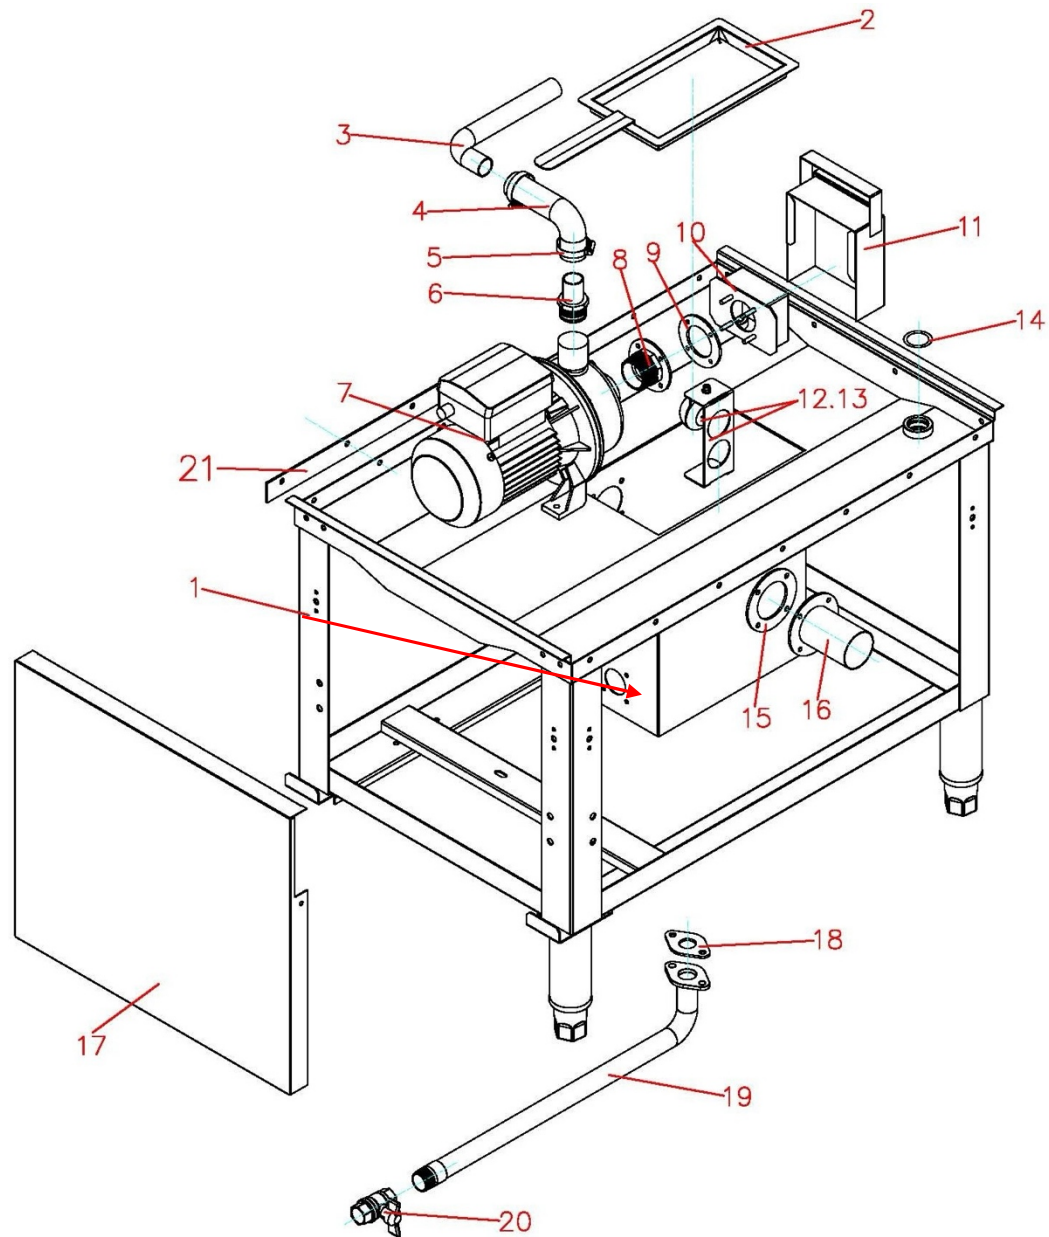

GLOBAL-TEK MACHINERY PTE. LTD.

Double Rinse Tank (old model)			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-PD30(L-R) 0MF-PD30(R-L)	Double Rinse Tank Base (right to left or left to right)	1
2	0MF-PD30-310	Scrap Tray	1
3	0T2D-50309-9	Elbow Pipe	1
4	0JD-50309-3A	Rubber Hose	1
5	E018-18X38-01	Hose Clamp	2
6	0T2D-50309-8	Hose Adapter	1
7	G003-50/025-02 G003-50/025-01	WBD50HZ/0.25KW WBD60HZ/0.25KW Rinse Motor	1
8	0JD-60305	Wash Pump Inlet Flange	1
9	F001-60307-01	Gasket	1
10	0JD-60306	Pump Intake Screen Holder	1
11	0JD-65304	Pump Intake Screen	1
12	0T2D-70309	Floating Ball	1
13	0CD-YQ23-318	Float Ball Bracket	1
14	F002-25x2.65-01	O Ring	2
15	F001-60307A-01	Gasket	2
16	0CD-YQ27-309	By-Pass Frank	2
17	0MF-PD33-307	Lower Front Panel	2
18	F001-50317-01	Gasket	1
19	0CD-PD37-310	Drain Connecting Pipe	1
20	D018-1/2-01	Drain Valve	1
21	0JD-60306	Bracket	1


Double Rinse Tank (new model)

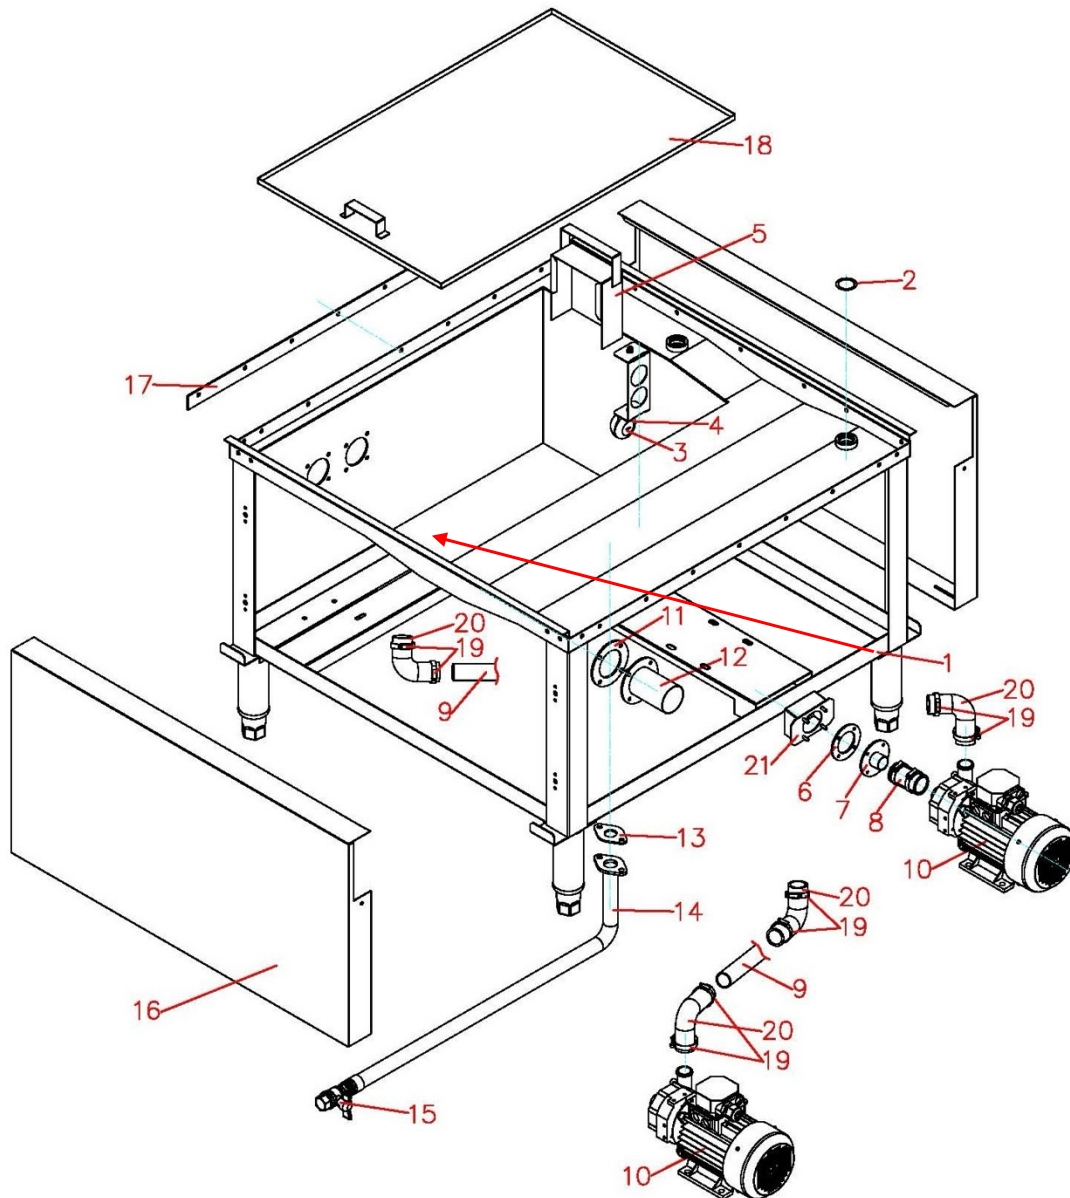

GLOBAL-TEK MACHINERY PTE. LTD.

<u>Double Rinse Tank (new model)</u>				
Item No.	Parts Series No.	Parts Name	Parts Name	Qty
1	0MF-PD30A(L-R) 0MF-PD30A(R-L)		Double Rinse Tank Base (left to right or right to left)	1
2	F002-25x2.65-01		O Ring	2
3	0T2D-70309		Floating Ball	1
4	0CD-YQ23-318		Float Ball Bracket	1
5	0JD-65304		Pump Intake Screen	1
6	F001-60307-01		Gasket	1
7	0JD-60305		Wash Pump Inlet Flange	1
8	F021-D25-01		Rubber Hose	0.1 米
9	C001-D19X1.2-01		Rubber Hose	1
10	G003-2226/4160-01 G003-2226/2540-01	FIR 0.15KW-60HZ FIR 0.15KW-50HZ	Rinse Motor	1
11	F001-60307A-01	密封墊-JD-60307A	Gasket	2
12	0CD-YQ27-309	溢水口	By-Pass Frank	2
13	F001-50317-01	密封墊-T2D-50317	Gasket	1
14	0CD-PD37-310	双喷淋排水口	Drain Connecting Pipe	1
15	D018-1/2-01	銅蝶閥-1/2	Drain Valve	1
16	0MF-PD33-307	底面板	Lower Front Panel	2
17	0CD-YQ23-313	压条	Bracket	2
18	0MF-PD30-310A	垃圾籃	Scrap Tray	1
19	E018-18X38-01	喉箍-XG-18-38	Hose Clamp	4
20	0JD-50309-3A	橡膠管-JD-50309-3A	Rubber Hose	2
21	0JD-60306	网罩插座	Pump Intake Bracket	1


Double Rinse Assembly (old model)

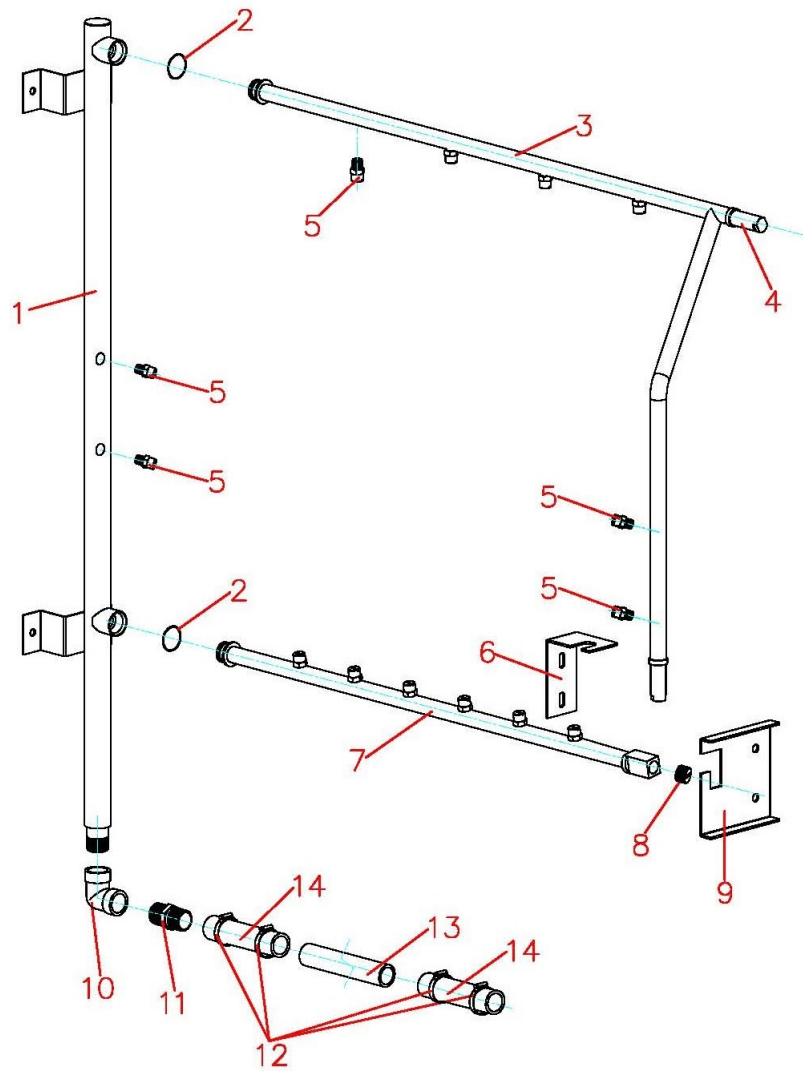

GLOBAL-TEK MACHINERY PTE. LTD.

Double Rinse Assembly (old model)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-PD37-301	Stand Pipe	1
2	F002-12.5x2.65-01	O Ring	2
3	0MF-PD37-302	Upper Final Rinse Arm (without nozzles, O-ring & end-cap)	1
4	A012-PD37/302/5-01	Adapter Connector	2
5	A012-50311/6-03	Final Rinse Nozzle	14
6	0CD-PD37-304	Side Rinse Holder	1
7	0MF-PD37-303	Lower Rinse Arm	1
8	A012-50311/5-01	Copper End-Cap	1
9	0MF-PD37-305L 0MF-PD37-305R	Lower Rinse Arm Bracket (left or right)	1
10	D009-1/2-01	½”S.S. Bend	1
11	D004-1/2-01	½” S.S. Coupling	1
12	E018-18X38-01	Hose Clamp	4
13	C001-D25X1.5-01	Stainless steel pipe	1
14	F021-D25-01	Rubber hose	1


Single Rinse Assembly (New)

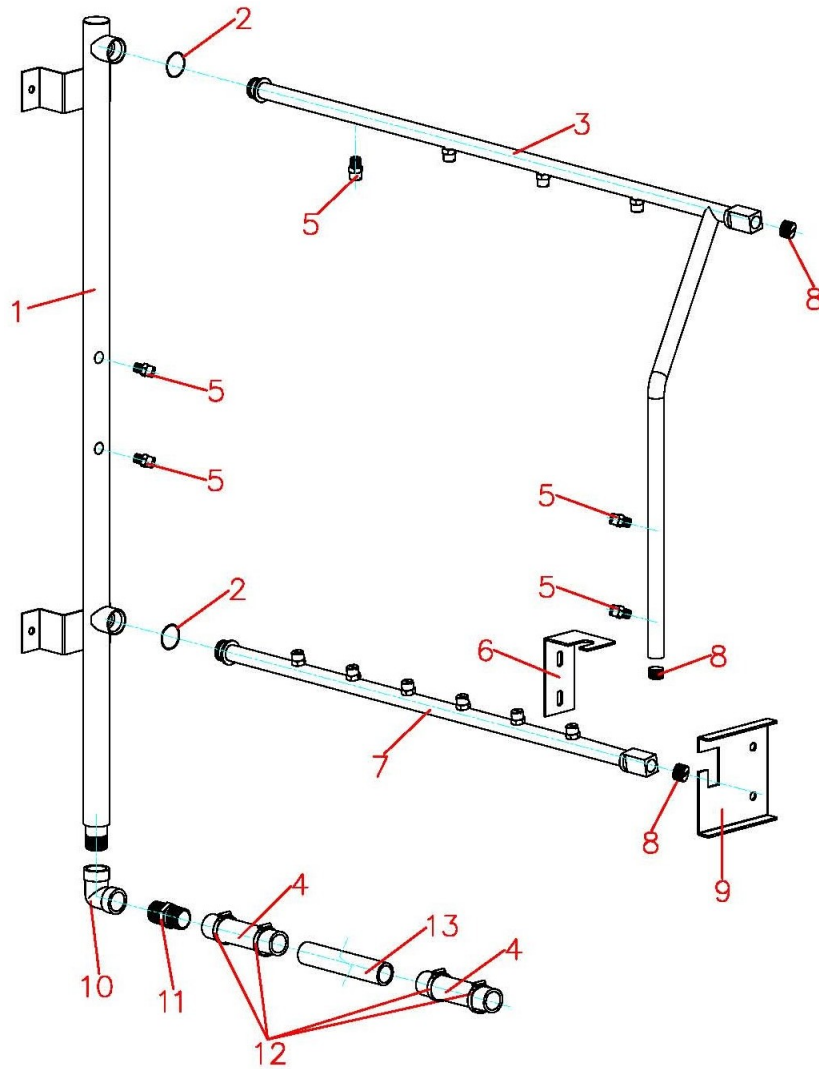

GLOBAL-TEK MACHINERY PTE. LTD.

Single Rinse Assembly (New)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-PD37-301	Stand Pipe	1
2	F002-12.5x2.65-01	Rinse Arm O Ring	2
3	0MF-PD37-302	Upper Final Rinse Arm (w/o nozzles, end-cap, O-ring)	1
4	F021-D25-01	Connecting Rubber hose	1
5	A012-50311/6-03	Final Rinse Nozzle	14
6	0CD-PD37-304	Rinse Arm Bracket	1
7	0MF-PD37-303	Lower Rinse Arm (w/o nozzles, end-cap, O-ring)	1
8	A012-50311/5-01	Rinse Arm End-cap	3
9	0MF-PD37-305L	Rinse Arm Holder (L->R)	1
	0MF-PD37-305R	Rinse Arm Holder (R->L))	1
10	D009-1/2-01	½”S.S. Elbow	1
11	D004-1/2-01	½” S.S. counpling	1
12	E018-18X38-01	Hose Clamp	4
13	C001-D25X1.5-01	Stainless steel pipe	1


Double Rinse Assembly (Old)

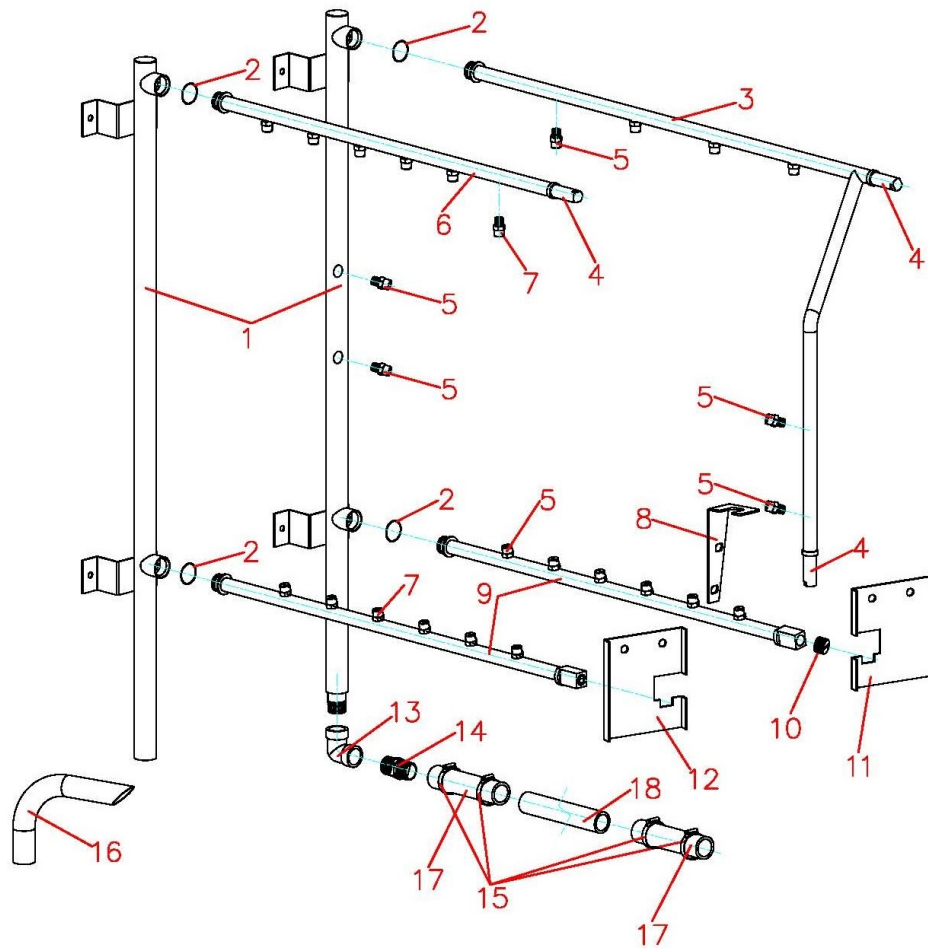

GLOBAL-TEK MACHINERY PTE. LTD.

Double Rinse Assembly (Old)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-PD37-301	Stand Pipe	2
2	F002-12.5x2.65-01	Rinse Arm O Ring	4
3	0MF-PD37-302	Upper Final Rinse Arm (w/o nozzles, end-cap & O-ring)	1
4	A012-PD37/303/5-01	Adapter Connector	3
5	A012-50311/6-03	Final Rinse Nozzle	14
6	0MF-PD37-302A	Upper Pre-Rinse Arm (w/o nozzles, end-cap & O-ring)	1
7	A012-50311/6-01	Pre-Rinse Nozzle	12
8	0MF-PD37-304	Side Rinse Arm Bracket	1
9	0MF-PD37-303	Lower Rinse Arm (pre-rinse or final rinse)	2
10	A012-50311/5-01	Rinse Arm End-cap	2
11	0MF-PD37-305AR	Lower Final Rinse Arm Bracket	1
12	0MF-PD37-305AL	Lower Rinse Arm Bracket	1
13	D009-1/2-01	½”S.S. Elbow	1
14	D004-1/2-01	½” S.S. Coupling	1
15	E018-18X38-01	Hose Clamp	4
16	0CD-PD37-306	Fill Elbow	1
17	F021-D25-01	Connecting Rubber hose	1
18	C001-D25X1.5-01	Stainless steel pipe	1


Double Rinse Arm Assembly (New)

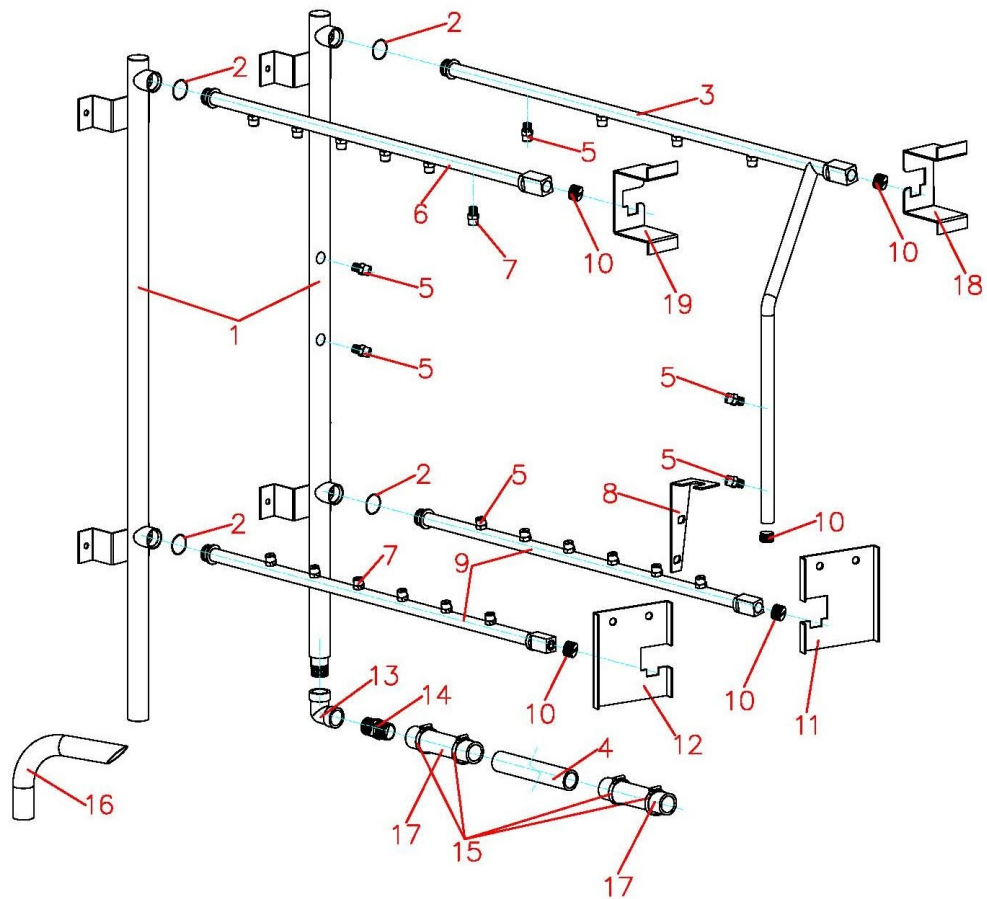

GLOBAL-TEK MACHINERY PTE. LTD.

Double Rinse Arm Assembly (New)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-PD37-301	Stand Pipe	2
2	F002-12.5x2.65-01	Rinse Arm O Ring	4
3	0MF-PD37-302	Upper Final Rinse Arm (w/o nozzles, end-cap & O-ring)	1
4	C001-D25X1.5-01	Stainless steel pipe	1
5	A012-50311/6-03	Final Rinse Nozzle	14
6	0MF-PD37-302A	Upper Pre-rinse Arm (w/o nozzle, end-cap & O-ring)	1
7	A012-50311/6-01	Pre Rinse Nozzle	12
8	0CD-PD37-304	Side Rinse Arm Bracket	1
9	0MF-PD37-303	Lower Rinse Arm (pre-rinse or final rinse)	2
10	A012-50311/5-01	Rinse Arm End-cap	5
11	0MF-PD37-305AR	Lower Final Rinse Arm Bracket	1
12	0MF-PD37-305AL	Lower Pre-rinse Arm Bracket	1
13	D009-1/2-01	½”S.S. Elbow	1
14	D004-1/2-01	½” S.S. Coupling	1
15	E018-18X38-01	Hose Clamp	4
16	0CD-PD37-306	Fill Elbow	1
17	F021-D25-01	Rubber Jointing Hose	1
18	0CD-PD31-302A-L	Upper Final Rinse Arm Bracket	1
19	0CD-PD31-302R-A	Upper Pre-rinse Arm Bracket	1


Electricity Heat Booster Heater Assembly

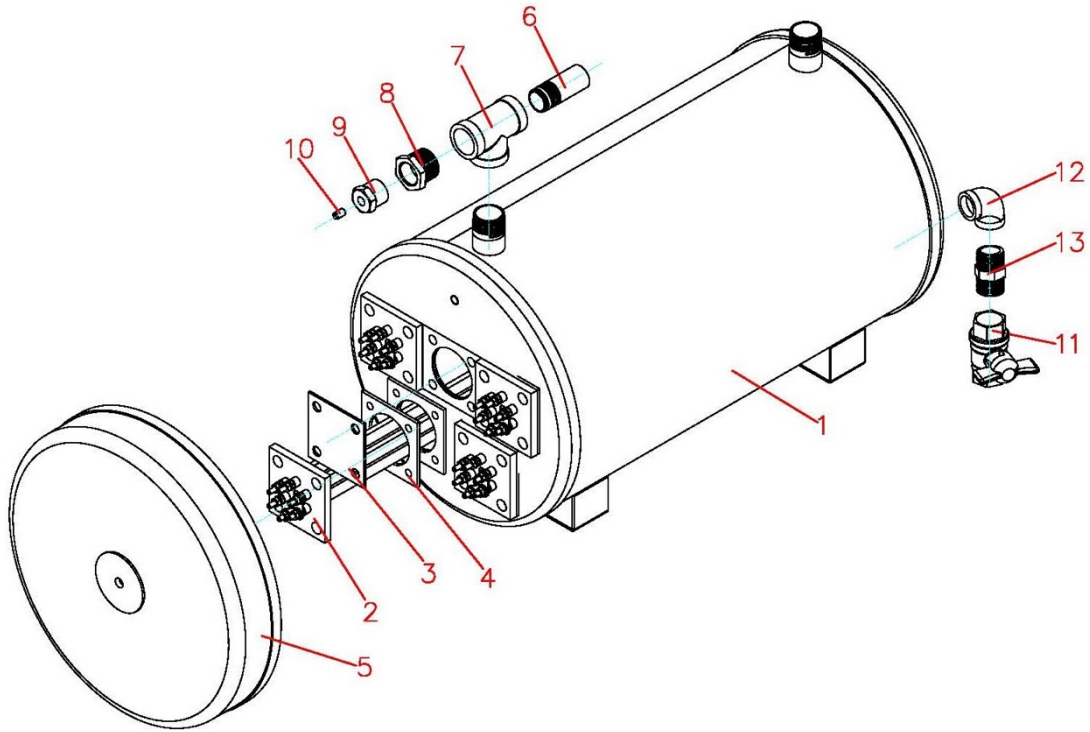

GLOBAL-TEK MACHINERY PTE. LTD.

Electricity Heat Booster Heater Assembly			
Item No.	Parts Series No.	Parts Name	Qty
1	0T1D-40A-301	Booster Tank	1
2	G005-9KW-02	9 kW Heating Element	4
3	F001-40305-01	Heater Hold Plug	1
4	0T2D-40309	9 kW Heater Gasket	5
5	F006-QDG-01	Booster Insulation Cover	1
6	D005-3/4x70-01	Joint (7 cm)	1
7	D006-3/4 -01	¾” S.S. T-Joint	1
8	D008-1/2 x3/4-01	Reducer Union	1
9	D011-1/8x1/2-01	Rinse Aid Injection Union	1
10	D026-1/8-01	Plug	1
11	D018-1/2-01	Butterfly Valve	1
12	D009-1/2-01	½”S.S. Elbow	1
13	D004-1/2-01	1/2” S.S. Coupling	1


Steam Heat Booster Heater Assembly

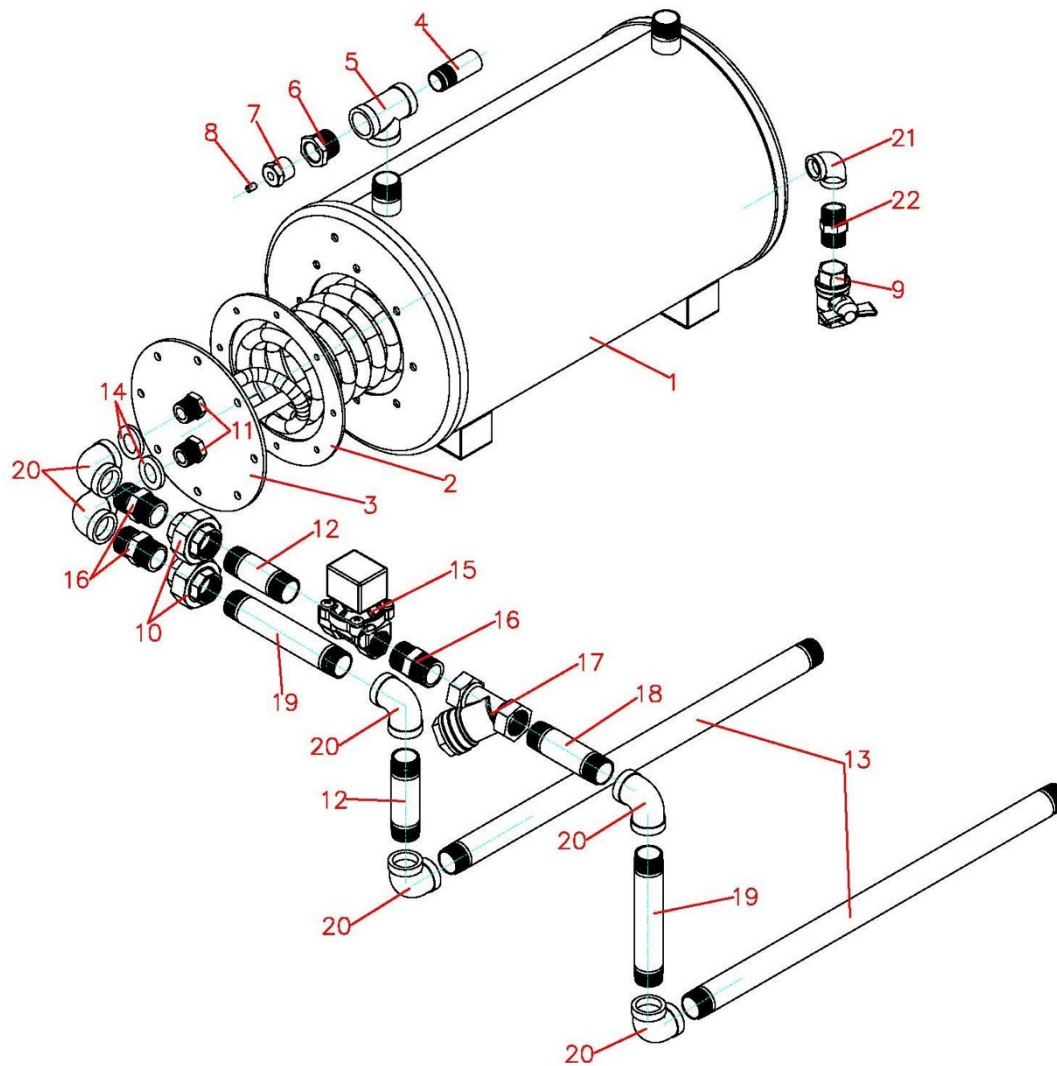

GLOBAL-TEK MACHINERY PTE. LTD.

Steam Heat Booster Heater			
Item No.	Parts Series No.	Parts Name	Qty
1	0T1Z-40A-301	Steam Heat Booster Tank	1
2	0T2Z-40309	Gasket	1
3	G006-ZQ-01	Steam Heating Element	1
4	D005-3/4x70-01	Joint (70 cm)	1
5	D006-3/4 -01	¾” S.S. T-Joint	1
6	D008-1/2 x3/4-01	Reducer Union	1
7	D011-1/8X1/2-01	Rinse Aid Injection Union	1
8	D026-1/8-01	Plug	1
9	D018-1/2-01	Butterfly Valve	1
10	D014-3/4-01 D014-3/4-02 D014-3/4-03 D014-3/4-04	Coupling Joint	2
11	A012-40307/2-01	Union	2
12	D004-3/4x60-01	¾” S.S. Joint	2
13	D004-3/4*285-01	¾” S.S. Joint	2
14	F017-D20-01	Gasket	2
15	G017-AC110V-01	Steam Solenoid Valve	1
16	D004-3/4-01	¾” S.S. Joint	3
17	D016-3/4-01	Strainer	1
18	D004-3/4x75-01	¾” S.S. Joint	1
19	D004-3/4X98-01	¾” S.S. Joint	2
20	D009-3/4-01	¾”S.S. Elbow	6
21	D009-1/2-01	½”S.S. Elbow	1
22	D004-1/2-01	1/2” S.S. Coupling	1


Fill Piping Assembly

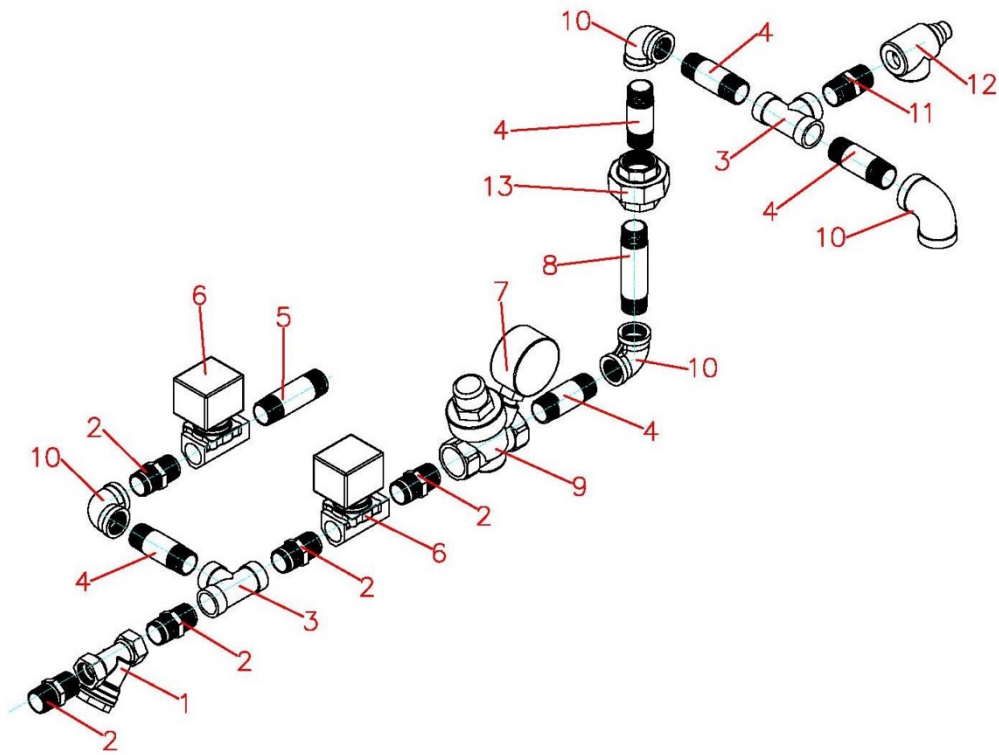

GLOBAL-TEK MACHINERY PTE. LTD.

Fill Piping Assembly			
Item No.	Parts Series No.	Parts Name	Qty
1	D016-3/4-01	Strainer	1
2	D004-3/4-01	¾" S.S. Joint	5
3	D006-3/4-01	¾"S.S. T-Joint	2
4	D004-3/4x60 -01	¾" S.S. Joint	5
5	D004-3/4x75-01	¾" S.S. Joint	1
6	G017-110VX3/4-01	ASCO Solenoid Valve	2
7	D015-1/4-01	Pressure Gauge	1
8	D004-3/4x98 -01	¾" S.S. Joint	1
9	D017-3/4-01	Pressure Regulator	1
10	D009-3/4 -01	¾"S.S. Elbow	4
11	D010-1/2x3/4-01	½x¾" S.S. Joint	1
12	D023-3BAR-01	Pressure Relief Valve	1
13	D014-3/4-01	Coupling Joint	1
	D014-3/4-02		
	D014-3/4-03		
	D014-3/4-04		


Blower Upper Component

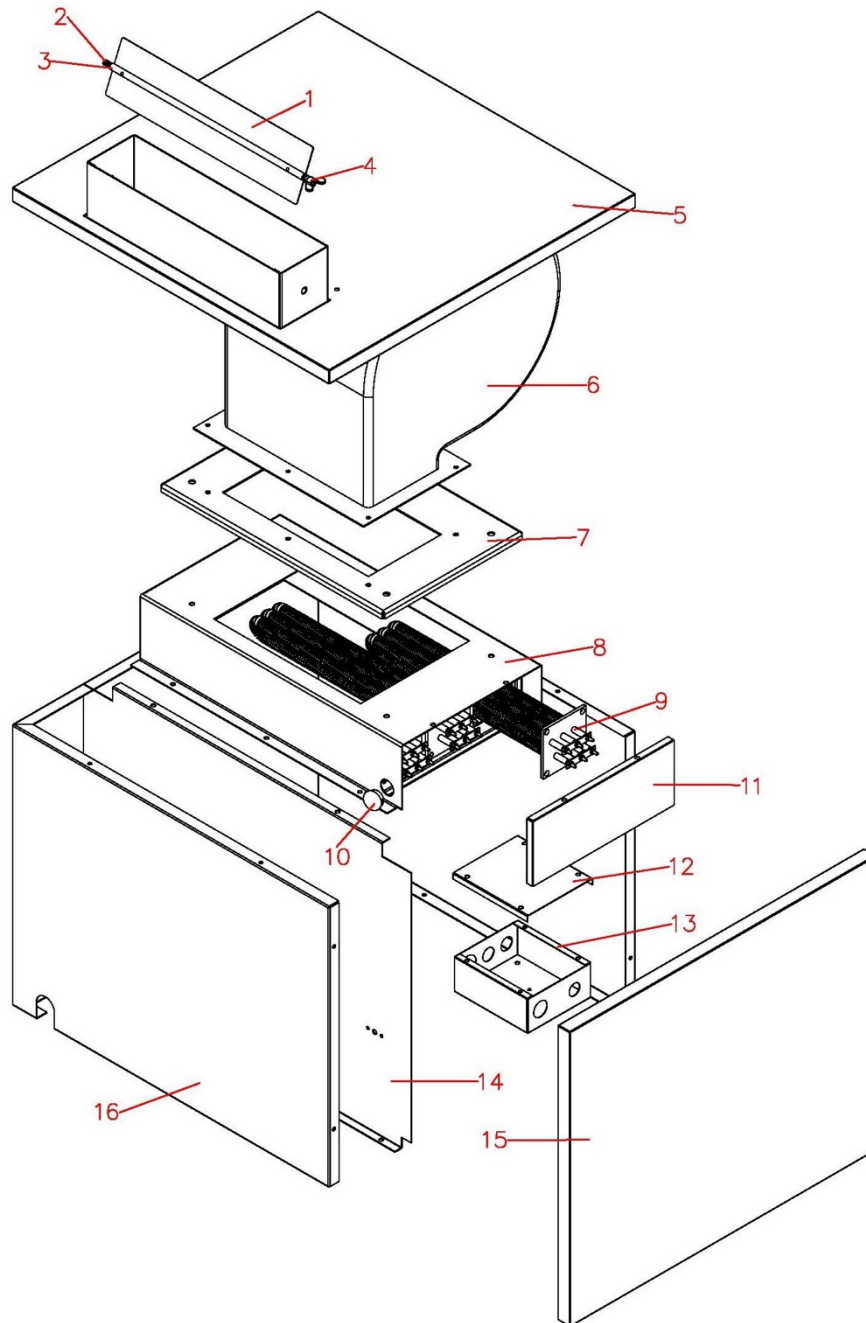

GLOBAL-TEK MACHINERY PTE. LTD.


Blower Upper Component			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-J11-303-4	Adjustable Blade	1
2	A012-J11/303/3-02	Shaft	1
3	A012-J11/303/5-01	Cover	1
4	E016-M8-01	Nut	1
5	0MF-H42-302	Top Panel	1
6	G001-50HZ/0.75KW-01 G001-60HZ/0.75KW-01	Blower Fan	1
7	0MF-H42-303-3	Fan Holder	1
8	0MF-H42-303-1	Heating Element Housing	1
9	G005-4.5KW-05	Heating Element	3
10	F024-D25-01	Hold Plug	1
11	0CD-H42-303-4	Housing Cover	1
12	0MF-H44-302	Junction Box Cover	1
13	<u>0MF-H44-301(L-R)</u> 0MF-H44-301(R-L)	Junction Box	1
14	<u>0MF-H42-305(L-R)</u> 0MF-H42-305(R-L)	Panel	1
15	0MF-H42-308	Cover Board	1
16	<u>0MF-H42-301(L-R)</u> 0MF-H42-301(R-L)	Panel	1

Blower Upper Hood (480 mm)

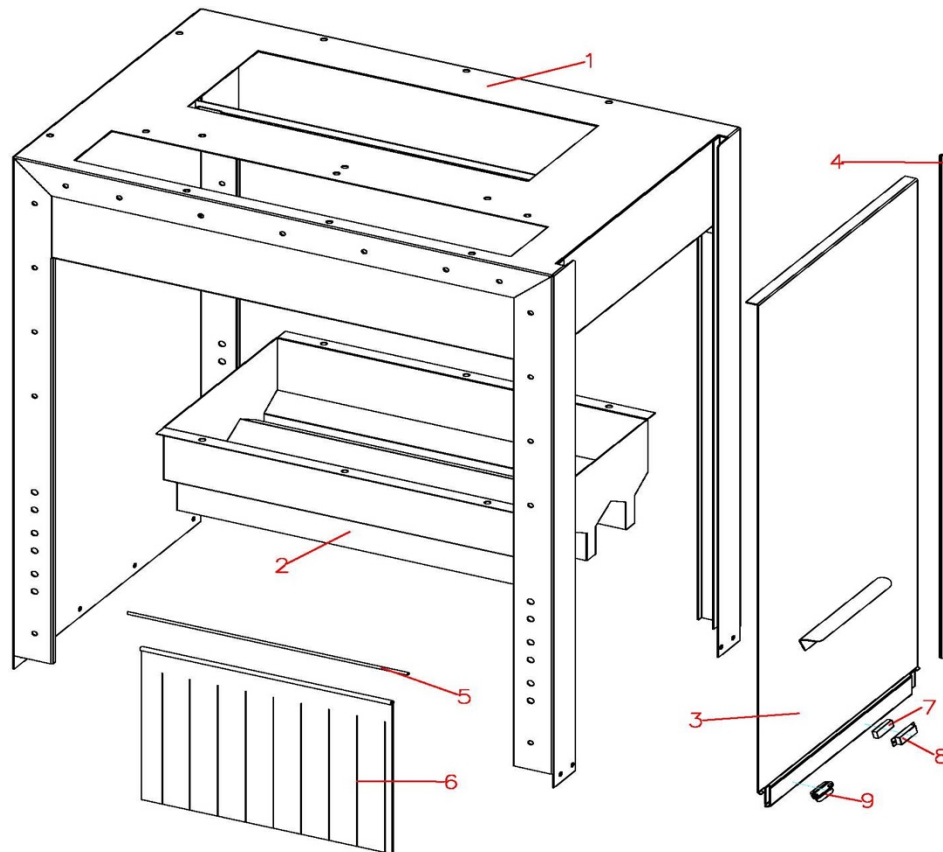

GLOBAL-TEK MACHINERY PTE. LTD.

Blower Upper Hood (480 mm)			
Item No.	Parts Series No.	Parts Name	Qty
1	<u>OMF-H41(L-R)</u> OMF-H41(R-L)	Upper Hood	1
2	OMF-H43-301	Wind Nozzle	1
3	OMF-PD33-302	Door	1
4	F003-65326-01	Door Guide	2
5	C004-D6-01	Curtain Rod	1
6	F031-MF-01	Curtain	1
7	A005-10x17x51-01	Door Magnet	1
8	0T2D-65318-8	Magnet Housing	1
9	0T12D-65333	Drain Closer	1

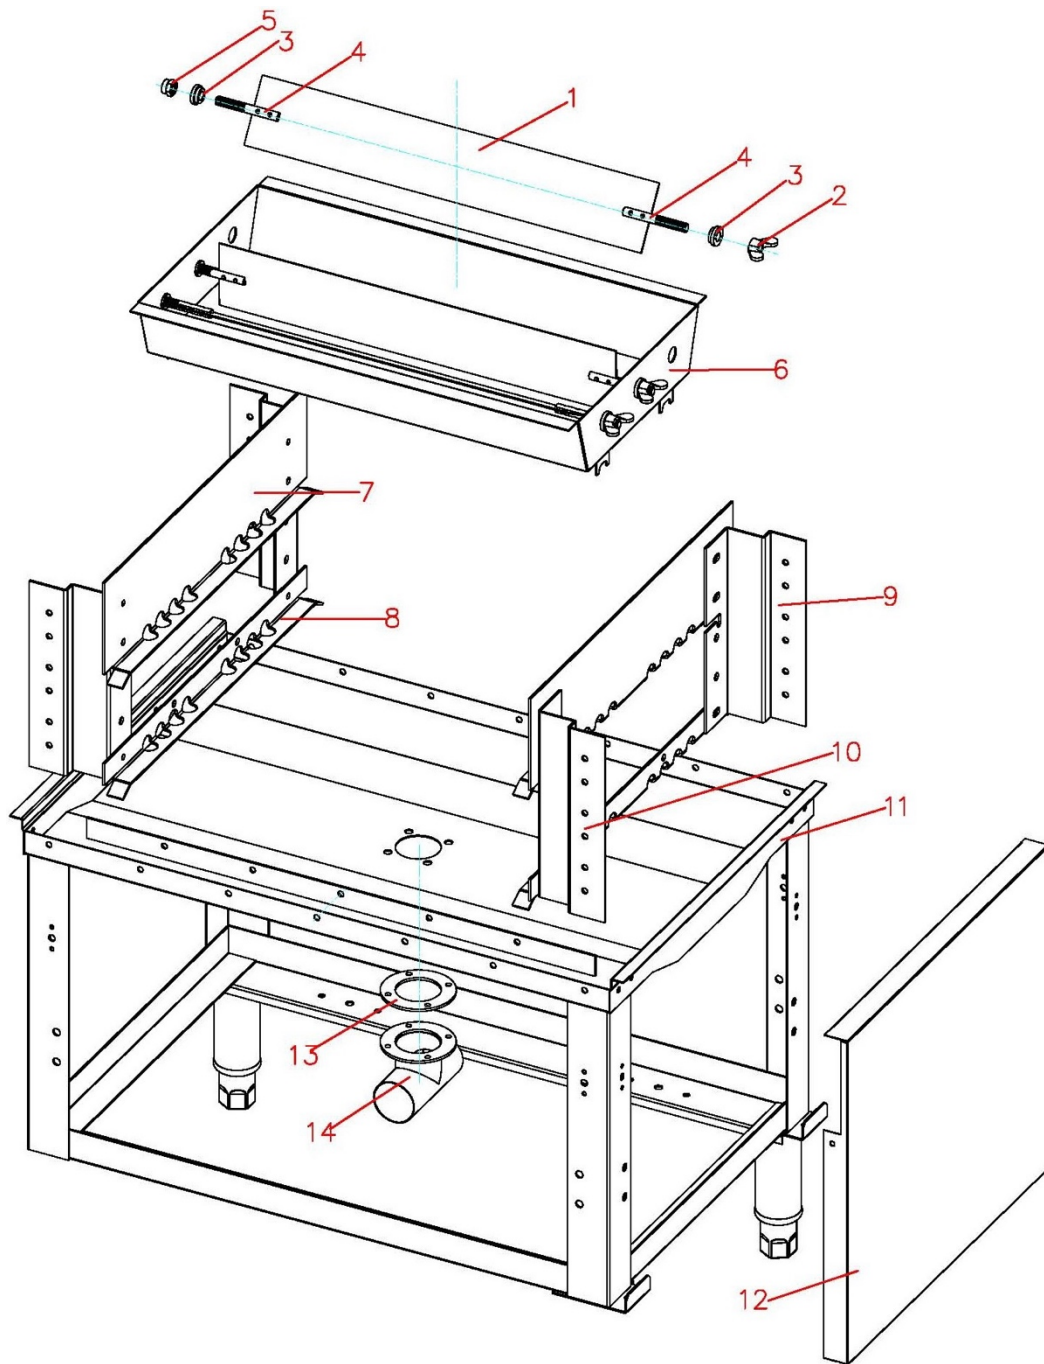


GLOBAL-TEK MACHINERY PTE. LTD.

Blower Lower Body (480mm)			
Item No.	Parts Series No.	Parts Name	Qty
1	OMF-H42-302-3	Adjustable Blade	1
2	E016-M10-01	Butterfly Nut	3
3	A012-65304-01	Washer	6
4	A012-65303-01	Shaft	6
5	E015-M10-01	Nut	3
6	OMF-H42-302-1	Air Reflection Pan	1
7	OMF-PD35-301	Upper Guide Rail	2
8	OMF-PD35-302	Lower Guide Rail	2
9	0CD-YQ25-303L	Bracket (left)	2
10	0CD-YQ25-303R	Bracket (right)	2
11	OMF-H40(L-R) OMF-H40(R-L)	Blower Pan (left or right)	1
12	OMF-PD33-307	Side Panel	2
13	F001-60307A-01	Drain Gasket	1
14	0CD-PD39-301	T-Drain	1

GLOBAL-TEK MACHINERY PTE. LTD.

Unloading Section Upper Hood (1000 mm)			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-J11-303-4	Adjustable Blade	1
2	A012-J11/303/3-02	Shaft	1
3	A012-J11/303/5-01	Cap	1
4	E015-M8-01	Nut	1
5	0MF-C51	Upper Hood	1
6	0MF-C50A(L-R)	Unloading Base	1
	0MF-C50A(R-L)		
7	F001-60307A-01	Gasket	1
8	0CD-C50A-309	Drain Elbow	1
9	0MF-C53A-309L	Upper Side Panel	1
10	0CD-C53-303	Cover	1
11	0MF-C53-310	Upper Panel	1
12	0MF-C53-311	Lower Panel	1
13	0CD-C53-304	Lower Panel Hook	1
14	0MF-C53A-309R	Upper Panel	1
15	0CD-30319	Motor Bracket	1
16	0MF-C53A-308R	Lower Panel	1
17	C004-D6-01	Curtain Rod	1
18	F031-MF-02	Curtain	1
19	E016-M10-01	Butterfly Nut	1
20	G044-XC-02	Plastic Cable Casing	0.45 m
21	G029-PG9-01	Conduit	1
22	G029-PG11-01	Conduit	1
23	G050-D26-01	Bushings	4
24	CD-YQ14-301	Junction Box	1
25	CD-YQ24-303	Junction Box1Pate	1


Unloading Section Guide Rail

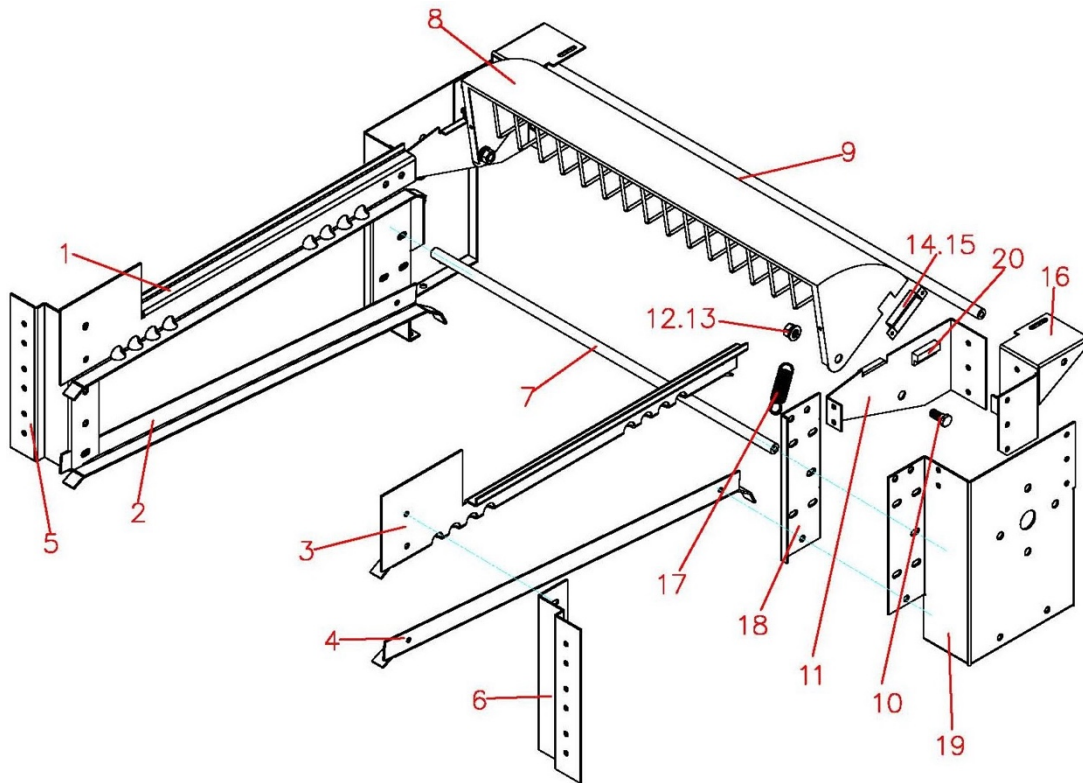

GLOBAL-TEK MACHINERY PTE. LTD.

Unloading Section Guide rail			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-C55A-305L	Upper Guide Rail (L)	1
2	0CD-C55A-304L	Lower Guide Rail (L)	1
3	0MF-C55A-305R	Upper Guide Rail (R)	1
4	0CD-C55A-304R	Lower Guide Rail (R)	1
5	0CD-YQ25-303L	Bracket (L)	1
6	0CD-YQ25-303R	Bracket (R)	1
7	A012-C55-309-01	Guide Support	1
8	0MF-C53-302	Conveyor Kick Stop	1
9	A012-C55-309-01	Support Shaft	1
10	A012-C53/302/3-01	Pins	2
11	0CD-C53-302-2L 0CD-C53-302-2R	Bracket (L or R)	2
12	E012-M10-01	Flat Washer	2
13	E015-M10-01	Nut	2
14	A005-10x17x51 -01	Magnet	1
15	0T2D-65318-8	Magnet Housing	1
16	0CD-C55-312L 0CD-C55-312R	Bracket (L or R)	1
17	A002-C53/302/4-01	Spring	1
18	0CD-C55-311L 0CD-C55-311R	Bracket (L or R)	2
19	0CD-C55-310L 0CD-C55-310R	Bracket (L or R)	2
20	0JD-65998A	Magnetic Switch	1


Conveyor Drive Assembly

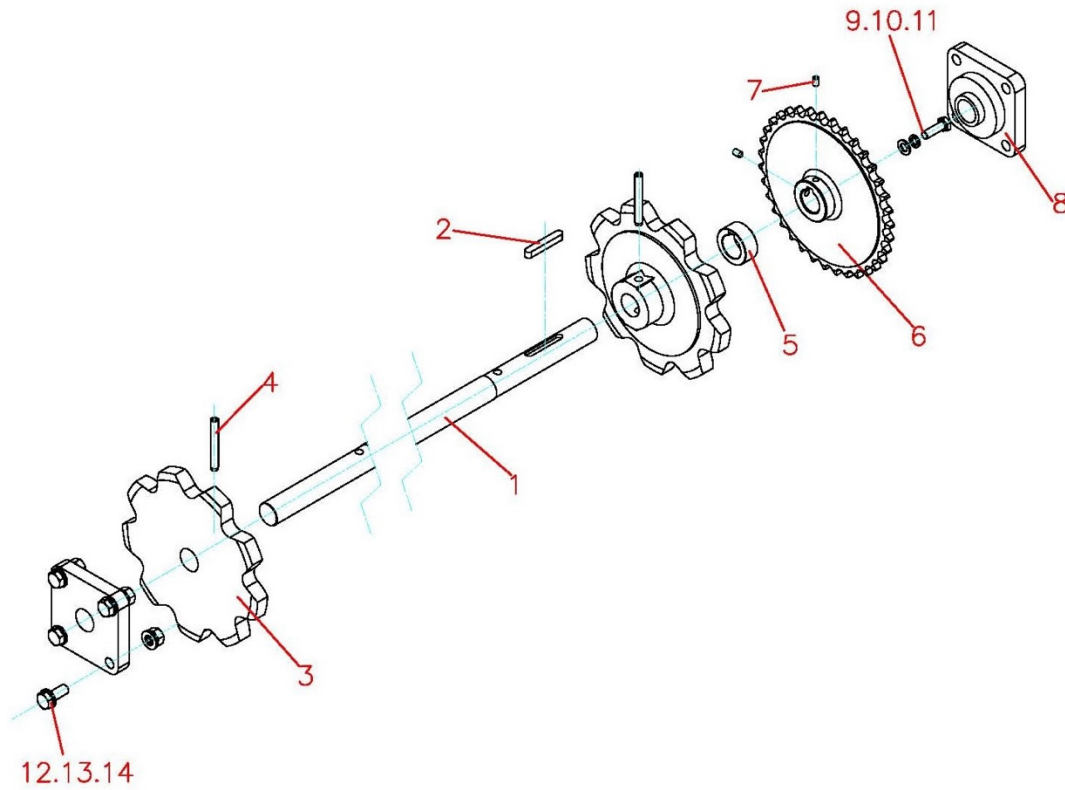

GLOBAL-TEK MACHINERY PTE. LTD.

Conveyor Drive Assembly			
Item No.	Parts Series No.	Parts Name	Qty
1	A012-30301-02	Transmission Shaft	1
2	E020-8*50-01	Flat Key	1
3	F027-30305-01	Chain Wheel	2
4	A006-M8X70-01	Spring Seat	2
5	A012-30314-01	Gasket	1
6	A012-30302A-01	S.S. Driving Gear	1
7	E010- M6x10-01	Hex Bolt	2
8	A010-SUCF205-01	Bearing	2
9	E009-M8x25-01	Hex Bolt	1
10	E011-M8-01	Spring Washer	1
11	E012- M8-01	Flat Washer	1
12	E009-M10x30-01	Hex Bolt	8
13	E011-M10-01	Spring Washer	8
14	E012-M10-01	Flat Washer	8


Conveyor Motor Assembly

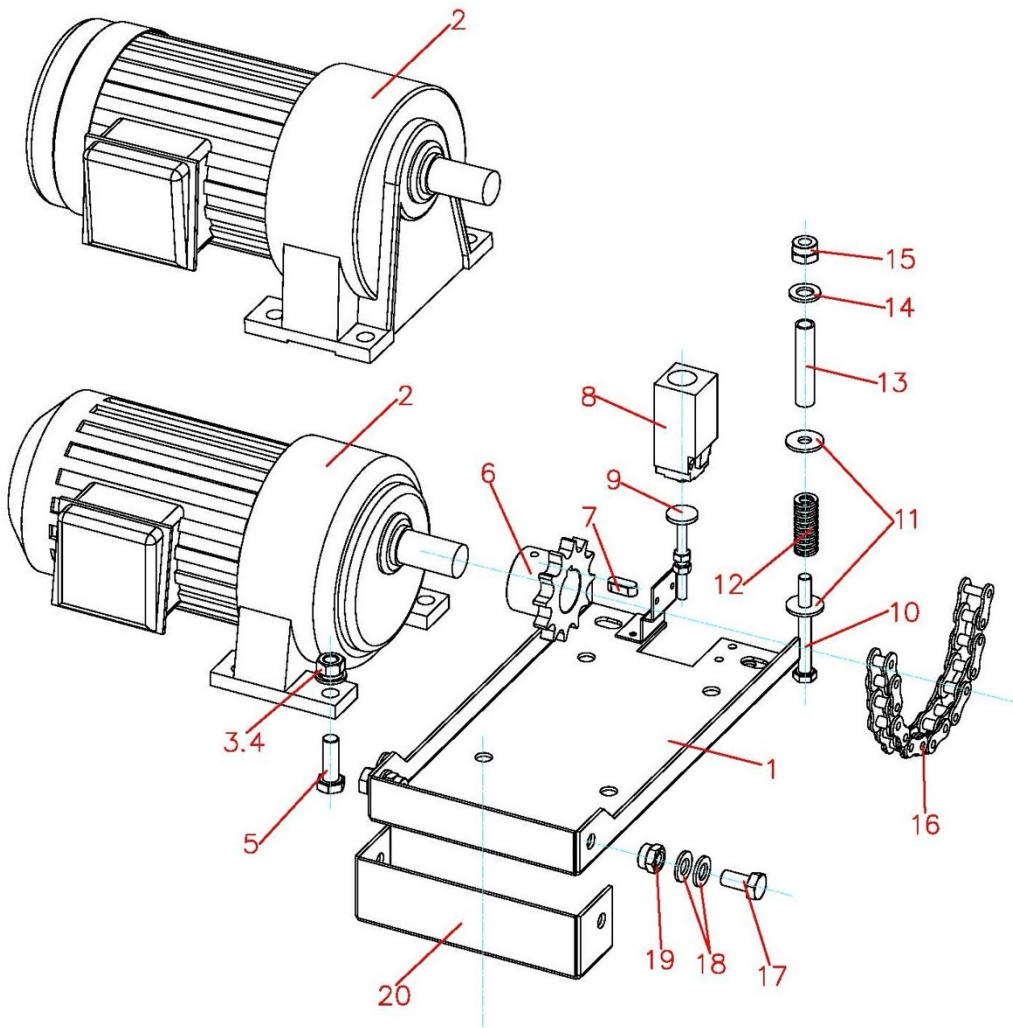

GLOBAL-TEK MACHINERY PTE. LTD.

Conveyor Motor Assembly			
Item No.	Parts Series No.	Parts Name	Qty
1	0CD-30316	Motor Mounting Bracket	1
2	G004-0.55X40S-01 (grey color) G004-0.55X57S-01 (grey color) G004-0.55X57S-02 (golden color) G004-0.55X57S-02 (golden color)	Conveyor Motor (select either one)	1
3	E013-M10-01	Hex Bolt	4
4	E011- M10-01	Spring Washer	4
5	E009-M10X25-01	Hex Bolt	4
6	A009-1X12T-01	Drive Gear	1
7	E020-7X7X35-01	Flat Key	1
8	G034-N2110P20C-01	Limit Switch	1
9	0T2D-60314	Limit Switch Space Adjusting	1
10	E010-M8x55-01	Bolt	1
11	E012-M22XD8-01	Flat Washer	2
12	A002-60312-01	Compressed Spring	1
13	A012-60313-01	Bolt Holder	1
14	E012-M8-01	Flat Washer	1
15	E015-M8-01	Nut	1
16	A008-1X72L-01	S.S. Chain	1
17	E009- M10X20-01	Hex Bolt	2
18	E012-M10-01	Flat Washer	8
19	E015-M10-01	Nut	2
20	0CD-30315	Motor Base Bracket	1


Conveyor Belt/Peg

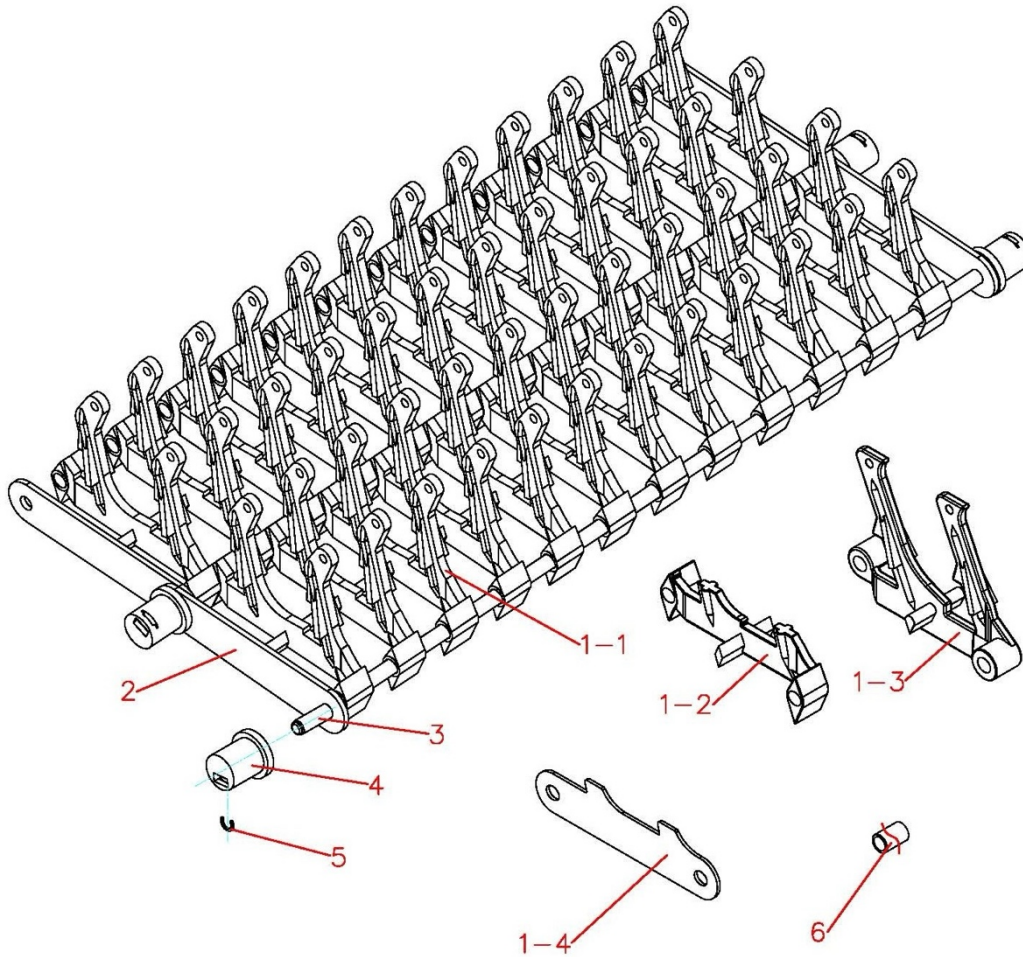

GLOBAL-TEK MACHINERY PTE. LTD.

Conveyor Belt/Peg			
Item No.	Parts Series No.	Parts Name	Qty
1-1	F032-30309-01 (standard peg)	Peg	12
1-2	F032-30309A-01 (plastic flat peg)		
1-3	F032-30309B-01 (height peg)		
1-4	0CD-30306A (S.S. flat peg)		
2	0CD-30306	S.S. Junction Plate	2
3	A012-30307-02	Conveyor Rod	1
4	F028-30308-01	Roller	2
5	E019-M5-01	C Clip	2
6	D033-D8X10-01	Teflon tube	1

Electrical Panel Cabinet

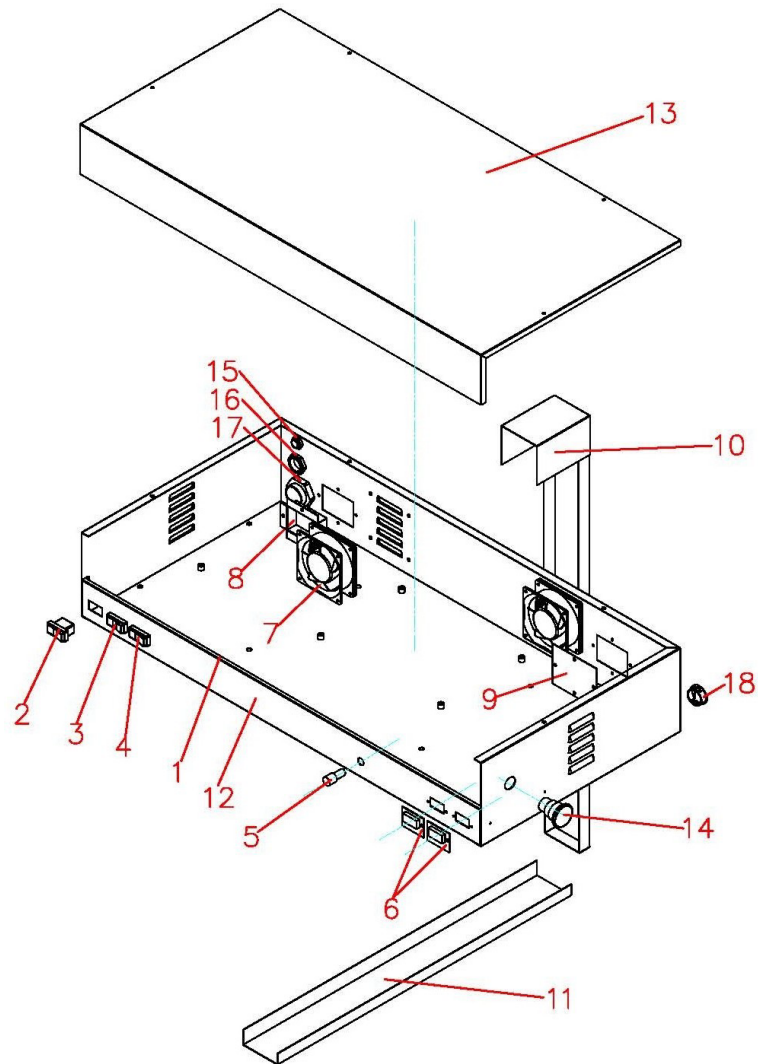


GLOBAL-TEK MACHINERY PTE. LTD.

Electric Panel Cabinet			
Item No.	Parts Series No.	Parts Name	Qty
1	0MF-70301	Control Panel	1
2	G034-CD-03	Power ON/Off Switch	1
3	G034-CD-01	Start / Stop Switch	1
4	G034-CD-04	Speed Switch	1
5	G035-D16/220V-01	Tank Level Indicating Light (green)	1
6	G014-WZJ/4010/3-01	Digital Temp. Display	2
7	G025-BALL-01	Exhaust Fan	2
8	0CD-70307	panel	1
9	0CD-70304	Hole Plug Plate	1
10	0MF-70305	S.S. Cable Trunk	1
11	0MF-70306	S.S. Cable Trunk Base	1
12	G031-CD-01	Operation Sticker	1
13	0CD-70302	Control Panel Cover	1
14	G036- BS54C-01	Emergency Stop Switch	1
15	G029-PG11-01	Conduit	2
16	G030-PG16-01	Conduit	1
17	G029-PG42-01	Conduit	1
18	F024-D38-01	Hole Plug	2

GLOBAL-TEK MACHINERY PTE. LTD.

Single Tank, Single Rinse MF Electrical Components

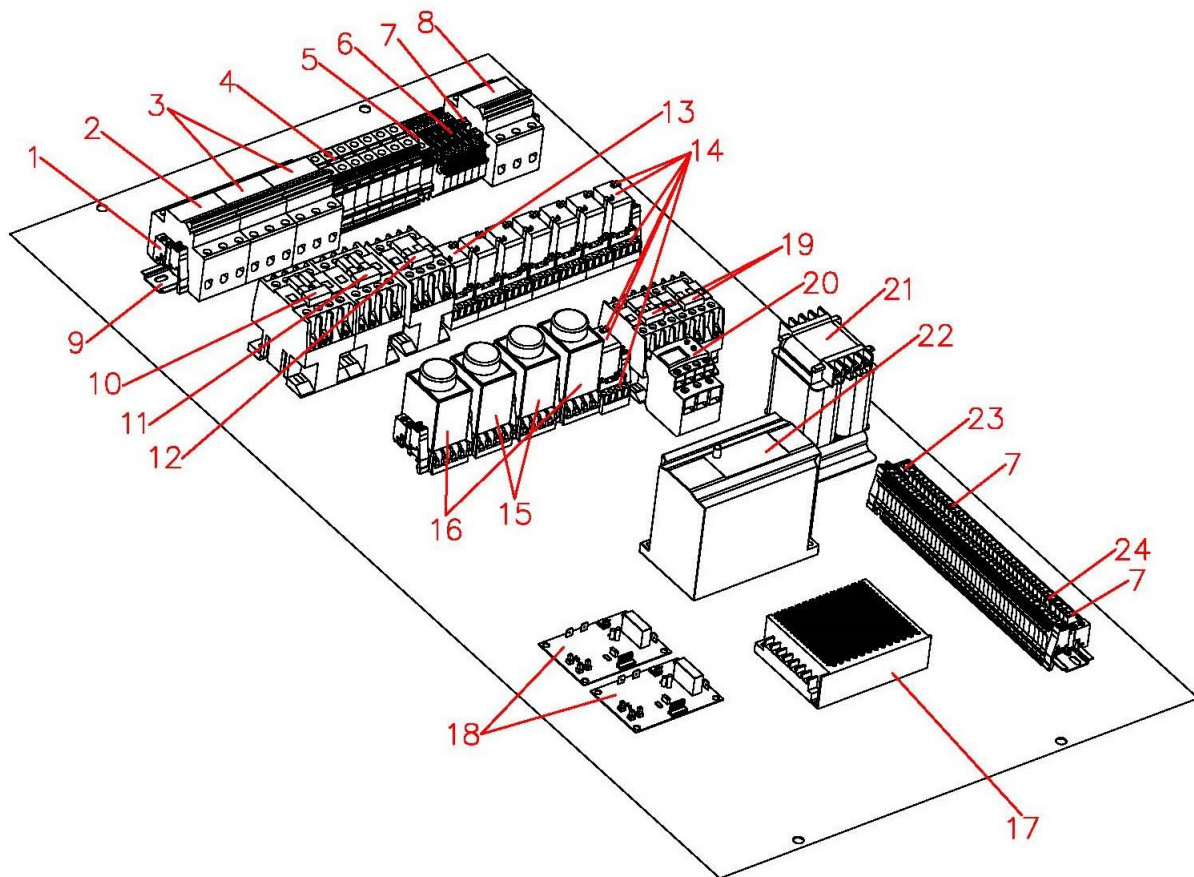


GLOBAL-TEK MACHINERY PTE. LTD.

Single Tank, Single Rinse MF Electrical Components			
Item No.	Parts Series No.	Parts Name	Qty
1	G042-2G2-01	Track Holder	13
2	G009-D63A-01	Circuit Breaker (63A)	1
3	G009-D40A-04	Circuit Breaker (40A)	2
4	G041-35N-01	Wiring Terminal	7
5	G041-35JD-01	Wiring Terminal	1
6	G041-4RD-01	Fuse Terminal	6
7	G041-4-01	Wiring Terminal	38
8	G009-D20A-02	Circuit Breaker (20A)	1
9	G047-DG-01	Guide Rail	3 米
10	G007-E65F5N-01	Contactor	1
11	G007-E40F5N-01	Contactor	1
12	G007-E32010F5N-01	Contactor	1
13	G012-DC12V-02	Relay (12v)	1
14	G012-F7-02	Relay	7
	G028-RXZE1M4C-01	Relay Base	8
	G012-RXZ410-01	Relay Clip	16
15	G011-6M/AC110V-01	Timer (6 minute)	2
16	G011-60S/AC110V-01	Timer (60 Sec)	2
17	G034-KGDY-01	Power Convertor	1
18	G014-4010-02	Temp. Control Board	2
19	G007-E0610F5N-01	Contactor	2
20	G010-10KN-02	Wash Pump Over-Load Control	1
21	G016-300V-01	Transformer	1
22	G015-220V-01	Inverter	1
23	G041-6JD-01	Wiring Terminal	2
24	G041-6-01	Wiring Terminal	2

GLOBAL-TEK MACHINERY PTE. LTD.

Single Tank, Single Rinse & Blower MF Electrical Components

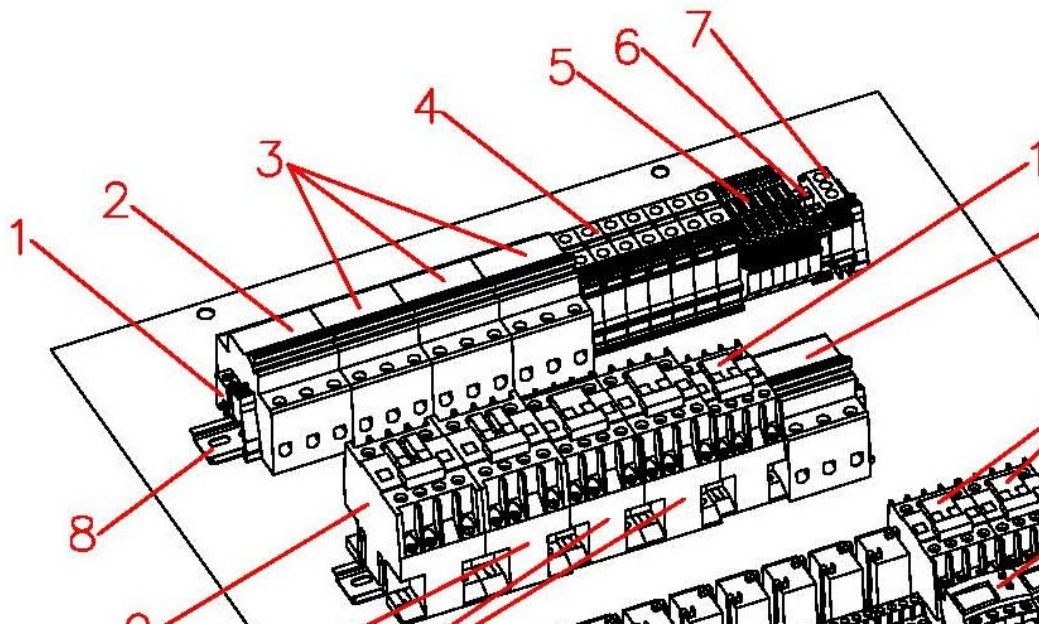

GLOBAL-TEK MACHINERY PTE. LTD.

<u>Single Tank, Single Rinse & Blower MF Electrical Components</u>			
Item No.	Parts Series No.	Parts Name	Qty
1	G042-2G2-01	Track Holder	13
2	G009-D63A-01	Circuit Breaker (63A)	1
3	G009-D40A-04	Circuit Breaker (40A)	3
4	G041-35N-01	Wiring Terminal	7
5	G041-4RD-01	Fuses	6
6	G041-4-01	Wiring Terminal	39
7	G041-35JD-01	Wiring Terminal	1
8	G047-DG-01	Guide Rail	3 米
9	G007-E65F5N-01	Contactor	1
10	G007-E40F5N-01	Contactor	1
11	G007-E32010F5N-01	Contactor	2
12	G007-E0610F5N-01	Contactor	3
13	G009-D20A-02	Circuit Breaker	1
14	G012-DC12V-02	Relay (12v)	1
15	G012-F7-02	Relay	9
	G028-RXZE1M4C-01	Relay Base	10
	G012-RXZ410-01	Relay Clip	20
16	G034-KGDY-01	Power Convertor	1
17	G010-10KN-02	Wash Pump Over-Load Control	2
18	G011-6M/AC110V-01	Timer control	2
19	G011-60S/AC110V-01	Timer control	2
20	G011-3M/AC110V-01	Timer control	1
21	G016-300V-01	Transformer	1
22	G041-6JD-01	Wiring Terminal	2
23	G041-6-01	Wiring Terminal	2
24	G014-WZJ/4010/3-01	Temp. Display	1
25	G014-4010-02	Temp. Control Board	3
26	G015-220V-01	Inverter	1